

# ***Security System***

---

## ***User Guide***

---

---

### ***FOCUS CADET Fire & Commercial Burglary Alarm System***

**CADET  
REV 4**

***tyco***  
*Integrated Security*

# **TABLE OF CONTENTS**

---

<b>SYSTEM OVERVIEW .....</b>	<b>3</b>	ASSIGNING OR CHANGING USER	
INTRODUCTION .....	3	ACCESS .....	37
FOCUS® CADET FEATURES .....	3	CHANGING THE TIME AND DATE .....	42
CONTROL UNIT.....	4	DAILY OPERATING SCHEDULES.....	44
PROTECTION POINTS AND GROUPS .....	5	HOLIDAY DESCRIPTION AND DATES ..	50
USER ACCESS AND SECURITY .....	5	GROUP/POINT DESCRIPTIONS.....	52
AUTOMATED EVENT RECORDING AND		<b>SYSTEM OPERATION .....</b>	<b>54</b>
PRINTING.....	6	TURNING ON BURGLARY	
SUMMARY.....	6	PROTECTION .....	54
<b>FALSE ALARM PREVENTION .....</b>	<b>7</b>	TURNING OFF BURGLARY	
INTRODUCTION .....	7	PROTECTION .....	56
<b>QUICK START .....</b>	<b>11</b>	SYSTEM HISTORY LOG .....	59
INTRODUCTION .....	11	BYPASSING/UNBYPASSING	
OPERATING PANEL FUNCTIONS .....	11	BURGLARY PROTECTION .....	67
NORMAL INACTIVE SCREEN .....	12	EXTENDING CLOSE TIME.....	70
RESPONDING TO ALARMS .....	13	SENDING MESSAGES TO A PAGER.....	71
VIEWING CURRENT ALARMS .....	14	<b>SYSTEM TEST .....</b>	<b>72</b>
ENTERING YOUR PERSONAL ID		BURGLARY PROTECTION POINTS	
NUMBER .....	15	(AUDIBLE).....	72
THE NAVIGATIONAL MENU		PROTECTION POINTS (VISUAL) .....	73
SELECTIONS.....	16	PROTECTION GROUPS .....	74
TURNING BA GROUPS OFF .....	18	TESTING HOLDUP, FIRE, AND	
ACTION MENUS 1-4 –		SUPERVISORY DEVICES.....	74
MAIN FEATURES.....	18	BELL AND OPERATING PANEL	
SUMMARY.....	26	DISPLAY .....	75
<b>SYSTEM OPERATION OVERVIEW .....</b>	<b>27</b>	<b>TROUBLESHOOTING GUIDE.....</b>	<b>76</b>
OPERATING PANEL .....	27	<b>FIRE ALARM APPLICATION NOTE .....</b>	<b>79</b>
ACTION MENUS .....	29	ABOUT FIRE ALARM CODES.....	79
<b>SYSTEM PROGRAMMING .....</b>	<b>33</b>	CODE ENFORCEMENT.....	79
INTRODUCTION .....	33	CADET PLUS FIRE ALARM SYSTEM	
USER DATA .....	33	CAPABILITIES .....	79
ENTERING OR CHANGING A		<b>EMERGENCY EVACUATION.....</b>	<b>80</b>
USER NAME.....	34	<b>INDEX .....</b>	<b>86</b>
DELETING A USER ID CODE .....	36		

## ***System Overview***

---

### **Introduction**

The Tyco Integrated Security FOCUS® CADET is a user-friendly security system that monitors your site's detectors and alarms. Fully programmable, the FOCUS® CADET allows you to control hundreds of critical security functions from one menu-driven interface as simple to use as the automated teller machine (ATM) at your local bank.

The Tyco Integrated Security FOCUS® CADET consists of a central control unit, an operating panel, and up to 64 protection points. The control unit is protected by a heavy-gauge steel cabinet and protected by a tamper sensor. While monitoring protection points 24 hours a day the controller itself is electronically monitored by trained Tyco Integrated Security personnel. If a hazard or security breach occurs, the appropriate authorities (police, fire) are alerted. In case of a maintenance problem, Tyco Integrated Security service personnel can also be notified.

All functions are accessed through the system operating panels or through card/key readers.

### **FOCUS® CADET Features**

- a. Attractive, easy-to-use, menu-driven operating panel.
- b. Control of up to 64 protection points in as many as four independent groups from one central location.
- c. Manual activation or deactivation of any function.
- d. Ability to turn group(s) on in either the AWAY or STAY mode. STAY mode automatically bypasses certain point types. Check with your Tyco Integrated Security service technician to see if your system contains any of these point types.
- e. Ability to bypass points for maintenance or service.

## ***System Overview (cont'd)***

---

- f. Capacity of up to 99 individual operating panel users, each having various security privileges.
- g. Capacity of up to 255 individual card/key reader users, each having various levels of access.
- h. Ability to program automatic activation/deactivation of security groups.
- i. Control and recording of employee access to workplace areas along with time and date.
- j. Recording of security-related activities.
- k. Ability to send messages to up to 8 paging services.

Although the FOCUS® CADET has many powerful features, Tyco Integrated Security has designed the system to operate as close to “turnkey” as possible. Once the FOCUS® CADET is set up for your site, operators will need only swipe or insert a card or key, or enter a six-digit ID code once or twice a day.

### **Control Unit**

The FOCUS® CADET control unit – the brains of your security system – is a powerful microcomputer that manages every function of your security system. All information about your site’s security is stored in this unit.

The FOCUS® CADET operating panel was designed for intuitive and efficient operation by personnel with little or no experience using security systems. All operations are accessed through four sequential menus.

The **"?"** key on each menu provides context-specific help. The **QUICK START** section will help even the most instrument-shy operator get up to speed in under an hour.

---

## ***System Overview (cont'd)***

### **Protection Points and Groups**

The FOCUS® CADET monitors up to 64 protection points in up to four independent fire and burglary groups. The system lets you designate group names in ways that make sense for your specific needs. For example, “Office” and “Warehouse” could cover two sets of entry doors whose alarms activate/deactivate independently.

Turning groups on and off allows different tasks to be carried out at different times of day, all while maintaining the optimal level of safety and security.

By scrolling through the FOCUS® CADET menu options, you may turn groups on/off in the AWAY or STAY mode, or bypass points at any time for maintenance or servicing. The system also allows you to check points or groups to review their status, and alerts you to the precise location of an activated alarm. Although some features may be manually activated or deactivated at any time, FOCUS® CADET also features powerful scheduling capabilities for automated, worry-free operation.

The combination of point/group control and scheduling features allows operators of the system to construct versatile scenarios quickly and with no previous programming knowledge.

### **User Access and Security**

**NOTE:** The Access Control feature is not part of a UL Listed system.

Each FOCUS® CADET card/key reader acts as a security gateway to your workplace, or to a specific area where certain employees have access and others do not. This feature, which operates on manual-input codes, Wiegand, proximity, magnetic cards, or Marlok keys, allows tracking of all security-related activities, either through a continuous printout or by accessing the 512-event history log. The FOCUS® CADET supports up to 255 different users (maximum 99 user codes, the rest are access cards only) and various levels of security with all the flexibility you will need to assure that every employee has the proper level of access to the workplace areas.

## ***System Overview (cont'd)***

---

### **Automated Event Recording and Printing**

The Tyco Integrated Security FOCUS® CADET provides complete documentation and event-recording capabilities. The system prints all desired events and stores the last 512 system events in memory. The types of events recorded in the memory are:

- a. Changes in the system status.
- b. Activation/deactivation of points or groups.
- c. Use of a card/key reader.
- d. Modifications to user or system data.

In addition to the 512-event history log, you may obtain a real-time printout of all events at a remote printer.

The system's powerful data-handling capabilities are indispensable for keeping track of system status, for assuring smooth operation, for verifying workplace safety and security, and for documenting employee access.

### **Summary**

Tyco Integrated Security's FOCUS® CADET offers the security industry's best combination of versatility, value, and ease of use. It handles all your site's security and access control needs through a pleasant, intuitive, menu-driven user interface. Although the system uses a powerful microprocessor, it was designed so that non-technical personnel can easily access all its features.

The QUICK START section is meant as a guide to introduce new users to the operation of the FOCUS® CADET operating panel. After reading QUICK START and working through the exercises (a process that should take less than one hour), the user will be familiar with all of the system's most important functions and operations. Advanced operations and specific ways to get the most out of the system are covered in the rest of this manual.

## ***False Alarm Prevention***

---

### **Introduction**

In recent years the pace of electronic development of security systems has greatly accelerated. This has brought the price range of reliable monitored security systems to a level that is affordable to most households and nearly all businesses. As a result, the number of security systems installed is expanding swiftly.

Since these security systems are a most significant deterrent to unwanted intrusion, structures protected by security systems are generally safer than those without; this is a benefit to both the residents and the local law enforcement.

However, from time to time, many security system users operate their system improperly and an alarm signal is generated in error. This situation is referred to as a “false alarm.”

When a security system monitoring center receives an alarm signal, your local police and/or fire department will be advised that there is an emergency at your location requiring their timely response. Even if each user has only one false alarm every two years, the police could potentially be called upon to respond to nearly ten million false alarms each year. In most cities, more than 90 percent of all alarms reported to the police are FALSE! In many cities, the police spend as much as 15 percent of their time and resources on false alarm-generated “wild goose chases.” In turn, this:

- Diverts police and/or fire department personnel from legitimate calls.
- Puts the community members at unnecessary risk.
- Wastes taxpayers' money.
- Embarrasses the security system user.
- Diverts and wastes security company resources.

## ***False Alarm Prevention (cont'd)***

---

### **Statistics verify that more than 75 percent of all false alarms are caused by alarm system operators**

Of these, at least 7 out of 10 are simple errors made by a user while turning the system on or off or when leaving or entering the building. Other typical causes are:

1. Entering an area or opening a door or window whose protection has been turned on.
2. Animals or large insects roaming through areas with protection turned on.

False alarms on fire-monitored systems are typically caused by burning food, heavy smoking in a room, or steam from a shower.

### **Working as a team, you and Tyco Integrated Security must have a goal of zero false alarms**

In many cities, the municipal government and police department are attempting to make alarm system users more aware of their responsibility to reduce false alarms by:

1. Requiring permits for alarm system users issued by licensed security companies.
2. Charging fines for multiple false alarms and, in some areas, escalating fines if false alarms persist.
3. Refusing to respond to an alarm when the rate of false alarm signals remains high.

### **You must help eliminate false alarms**

By installing this dependable, state-of-the-art FOCUS® CADET system, which is monitored by Tyco Integrated Security Systems, you have already taken the first step.

Additional steps are to carefully read and understand this manual, to become thoroughly familiar with your system by practicing entry and exit commands, and to learn how your monitoring system can become part of



## ***False Alarm Prevention (cont'd)***

---

your work-day lifestyle. Learn your Personal Identification Number (PIN), which is necessary when you communicate with your Tyco Integrated Security Customer Monitoring Center. Then teach all others who will be using the system. Make sure they are confident they can flawlessly operate the system and are able to promptly cancel a false alarm, should one occur. All users must be very familiar with the operating procedure to cancel false alarms.

### **Preventing causes of false alarms**

The Tyco Integrated Security brochure entitled *Helping You Prevent False Alarms* refers you to this manual for any of several actions you may take to prevent false alarms. These actions are listed below:

- 1. When You Test Your System:** Follow the procedure under the heading *TESTING THE SYSTEM* in this manual. Make certain your system is “out of service” before you start testing the various sensors.
- 2. If You Move to a Different Building:** Tyco Integrated Security offers a special consideration to customers who move, provided you give to your local Tyco Integrated Security representative the name of the party that purchases or leases your present building. Do not take your operating panel or any part of your system with you. Ask Tyco Integrated Security to take your system out of service just before the new party takes ownership of your present building.
- 3. If You Get a Watchdog:** Nearly all types of animals can cause false alarms. If you get a watchdog or have other animals, do not allow them into a room with an area sensor when your system is turned on.
- 4. If You Hire Janitorial Help:** Assign a special user code to each janitor, and enter the code into the system using the procedure under the heading *SYSTEM PROGRAMMING* in this manual. Carefully train your help to turn the system on, turn it off, and cancel false alarms. They must also understand the entry and exit delays and be able to respond to a verification call from your Monitoring Center.

## ***False Alarm Prevention (cont'd)***

---

5. **If You Fumigate Your Building:** The chemical fog used in the fumigation process may be sensed as smoke by fire alarm smoke detectors and may also adversely affect area sensors. Therefore, be sure to notify Tyco Integrated Security ***BEFORE*** starting.
6. **If You Change Your Telephone:** Changes in the location of the telephone outlets or telephone numbers could compromise the effectiveness of your security system. Have a Tyco Integrated Security service technician inspect your system immediately after any such changes.
7. **If You Install Anything Near Any System Device:** If you install any electrical or electronic equipment within a few feet of any element of your security system, it could cause the security equipment to malfunction. Discuss such installation plans with a Tyco Integrated Security service technician prior to proceeding with the installation.
8. **If You Remodel or Renovate Your Building:** During the course of remodeling or renovating, there are often changes in telephone and/or electrical circuits. In addition, large clouds of construction dust are generated. Any of these can compromise the effectiveness of your security system.

In addition, any change in the position of walls, doors or window openings may disable certain sensors in your system. A change in the location of mirrors, pictures, or other wall hangings, as well as fans or large plants, could cause a false alarm when an area sensor is activated by movement or reflections of movement.

Remember to discuss any renovation or redecorating with your Tyco Integrated Security representative before you start construction or redecorating, and once again when you complete it.

### Introduction

The QUICK START section is designed to familiarize new users with the operation of the FOCUS® CADET operating panel in under an hour. It will introduce you the FOCUS® CADET four primary menus and guide you through the logic behind one or two operations from each menu.

Think of the QUICK START section as a “crash course” on how to access basic menus and functions of your new security system. After reading the QUICK START section and going through the exercises, users will be better able to define their particular control and programming needs and to pinpoint problems, then locate the needed information in this manual and follow the specific instructions confidently and efficiently.

### Operating Panel Functions

**The operating panel** is the primary interface between you, the operator, and the electronic components forming the “brains” of your FOCUS® CADET security system. The panel consists of a liquid crystal display (LCD) on the left and a numeric keypad (similar to the buttons on a TouchTone phone) on the right. Users can access most FOCUS® CADET operations through the LCD. Some operations require both the LCD screen and the keypad.

Operating panel functions are divided into three main groups:


1. **Programming** — Operations relate to system settings, user names, user ID numbers, schedules, names of points and groups, and time/date functions.
2. **System** — Operations allow you to turn burglary protection on and off, bypass protection points, respond to system alarms, obtain a history log, and extend your site’s close time.
3. **Test** — Operations enable operators to test protection points, security groups, and hardware.

## ***Quick Start (cont'd)***

---

### **Normal Inactive Screen**

When there are no alarms or troubles and no one is using the operating panel, the Normal Inactive Screen will display:

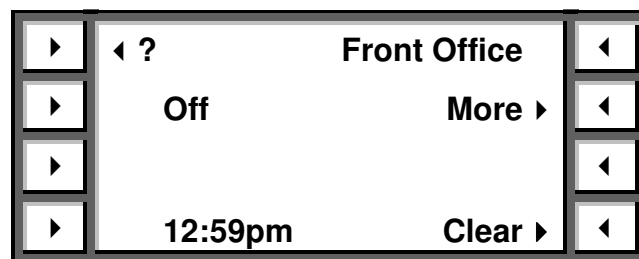

1. Press the **?** to view the Help Screen, which will aid you in responding to an alarm or trouble condition.
2. The top line of the display will indicate a particular Burglar Alarm (BA) group and the second line will indicate that group's status. To view status of other BA groups, press **More**.
3. As you enter your ID code, the system will verify your entry by displaying "X." If you make a mistake entering your ID code, press **Clear**.

## ***Quick Start (cont'd)***

---

### **Responding to Alarms**

During an alarm, your system's alarm annunciating devices (bell, siren, lights, and/or operating panel, depending on the optional devices you selected) will be activated. The operating panel and horns will sound an intermittent tone (with a 5-second pause every 10 seconds) to audibly announce a fire alarm and a steady tone to audibly announce a burglary alarm.

**BURGLARY NOTE:** Do not enter the premises until police arrive. Have a key available to let the police in.

**FIRE NOTE:** If you are on the premises when an alarm occurs, **EVACUATE IMMEDIATELY.**


**HOLDUP NOTE:** During a holdup or hostage (duress) situation, try to remain as calm as possible. All employees should be instructed on the operation of holdup devices. Users with ID codes should be instructed on the use of the Ambush/Hostage and Duress features.

## ***Quick Start (cont'd)***

---

### **Viewing Current Alarms**

During an alarm (excluding holdup, hostage and duress alarms), the operating panel will display the current alarm by type and point description.

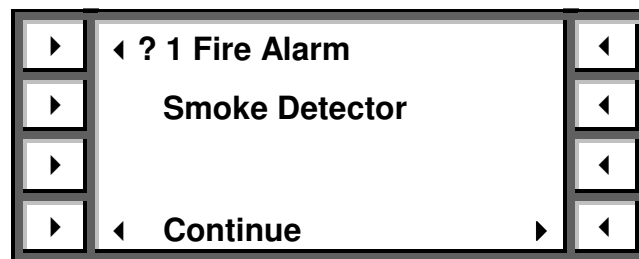

1. Using the operating panel's numeric keypad, enter a valid ID code to display the Action Menu 1 (see page 19) if no burglary groups are on; or press the "Turn off" selector button (if burglary groups are on) to deactivate all annunciating devices.
2. If burglary groups are on, complete the steps under "Turning Off Burglary Protection" in the *SYSTEM OPERATION* section. When all burglary groups are off, press **Continue** to display Action Menu 1.
3. Press **See alarms** to display the alarm type, point number, and description.
4. Press **Prev** or **Next** to display additional alarms.
5. Press **Quit** to display Action Menu 1.

## ***Quick Start (cont'd)***

---

### **Entering Your Personal ID Number**

The first step in performing any function within the FOCUS® CADET system is to enter your personal six-digit ID number.

#### **EXERCISE: ENTERING A VALID ID CODE**

Enter your personal ID number. You should hear a short beep after each digit is entered. After your number has been accepted, you will hear a longer beep. Now wait about 15 seconds and try to enter another, random six-digit number. What happens now? The number is recognized as an invalid ID code and the operating panel will display “Code Incorrect, Try Again.” If you make a mistake, press “Clear” to re-enter the number.

The operating panel is active for 10 seconds after a valid code is entered. This means you must enter a menu selection within that time or the operating panel will deactivate, requiring the input of a valid ID code again. Once you have selected a menu item, however, the panel remains active for a full minute before becoming inactive. This timeout feature automatically secures your FOCUS® CADET security system in the event of a distraction or emergency that causes you to step away from the operating panel.

#### **EXERCISE: PANEL ACTIVATION/DEACTIVATION**

Enter your ID code. Count to 15 after you hear the long beep. The operating panel should now become inactive. Enter your ID code again. As soon as you hear the long beep, press the **More** selection once. The screen should change to the next menu, Action Menu 2 (see page 21). Wait a few seconds and press **More** again. You should now be on Action Menu 3 (see page 23). Now wait a full minute. What happens?

## ***Quick Start (cont'd)***

---

If you waited a full minute in the last exercise, your operating panel should have entered its timeout phase. In other words, you have one minute after entering your last menu selection before the operating panel shuts down.

### **Hostage**

If this feature has been enabled, you can activate a silent holdup alarm by entering your ID code and incrementing the last digit by 2. For example, if your ID code is 011234, enter 011236 instead. Note that an ID code with a last digit of 8 becomes 0 and a 9 becomes 1.

## **The Navigational Menu Selections**

Each of the four Action Menus has several selections, depending on user privilege. Among these are the navigational menu selections, which take you from one menu to the next and back again. The two navigational selections from these menus are **More/First** and **Quit/Previous**.

### **The More/First Selection**

The **More** selection allows you to scroll through the Action Menus. At the last menu designation, the **More** selection changes to **First**. Selecting **First** brings you back to the first Action Menu. The position (bottom right) of the key does not change.

#### **EXERCISE: THE MORE/FIRST SELECTION**

Enter your ID code and press the **More** selection three times. You are now at the last Action Menu screen, and the **More** selection on the screen has changed to **First**. Choosing **First** will now bring you back to the first Action Menu screen. Repeat the steps two or three times to verify that you have seen each screen before.

### **The Quit/Previous Selection**

Pressing the menu selection **Previous** on the bottom left of each Action Menu screen returns you to the previous Action Menu. Choosing **Quit** from Action Menu 1 deactivates the operating panel.



## ***Quick Start (cont'd)***

---

### **EXERCISE: THE MORE/PREVIOUS SELECTION**

Enter your ID code and press the **More** selection once, then press the **Previous** selection. You should be back at Action Menu 1. Now choose **More** three times and **Previous** three times. Again you should be back at Action Menu 1. Experiment with the **More** and the **Previous** selections until you feel comfortable navigating through the four Action Menus.

Now return to the Action Menu 1 (choose **Previous** until its designation changes to **Quit**). Choose **Quit** to return to the inactive operating panel display.

### **Other Navigational Selections**

Later on, when you begin working in the submenus of the FOCUS® CADET system, you will encounter other navigational selections such as **Enter**, **Done**, **Next**, **Pgdn**, and **Continue**. The first two are used at the end of operations such as entering a new group name or changing an ID code. **Next**, **Pgdn**, and **Continue** are specific to certain submenus. Their meaning is similar to **More** in the Action Menus (i.e., they move you to the next logical step in the programming or operational procedure).

### **Summary: Navigational Selections**


Every Action Menu screen contains two navigational selections, **More/First** and **Quit/Previous**. **More/First** allows you to scroll forward among the four Action Menus, while **Quit/Previous** brings you to the previous menu screen (from screen 2-4) or inactivates the operating panel (from screen 1). If you are not completely comfortable with the navigational selections, go back and repeat the exercises before continuing.

## Quick Start (cont'd)

---

### Turning BA Groups Off

When an ID code is entered and any BA (Burglary) group is on, you will be presented with the following screen:

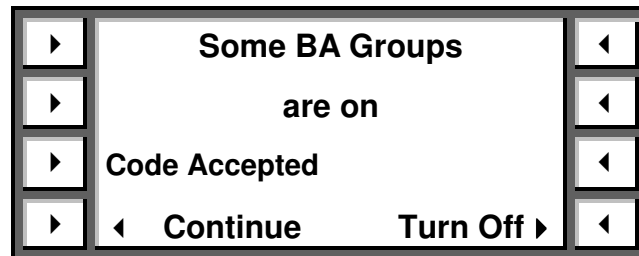

If you desire to turn off any group, press **Turn Off** to display groups that are on. To scroll through the groups that are on, press **Previous** or **Next**. To turn off that group, press the key to the right of the group name. *Hint: If all BA groups you have access to are to be turned off, press **All**.* Repeat the previous steps for all groups to be turned off.

### Action Menus 1-4 – Main Features


Now that you are familiar with the navigational and help features common to all FOCUS® CADET menus, it's time to take a closer look at what distinguishes one menu from another. To perform all the exercises here, your ID code will need to have access to all levels of operation.

Operating panel Action Menus 1-4 give you access to all the features in your security system through just 14 feature selections (three each on Action Menus 1 and 2, four each on Action Menus 3 and 4). These 14 selections, in turn, lead you logically and intuitively through the system submenus.

The FOCUS® CADET operating panel was designed to maximize functionality while eliminating memorization of complex commands; one menu leads you to the next — and the next, if necessary — until your operation is complete.

## Quick Start (cont'd)

### Action Menu 1

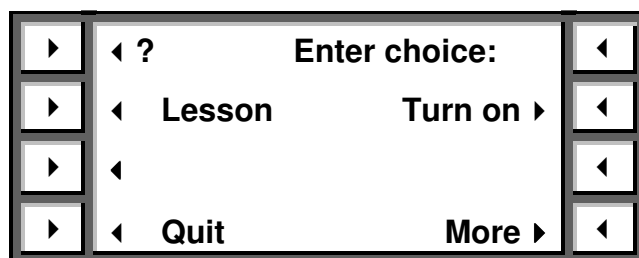

### Assistance: The “?” Selection

The FOCUS® CADET operating panel provides online assistance. Choosing ? from most menus provides definitions, descriptions, and assistance in using that menu or screen. For example, choosing ? at Action Menu 1 gives online descriptions of choices corresponding to **Lesson**, **See alarms**, **Quit**, **Turn on**, **Reset**, and **More**.

#### EXERCISE: THE “?” SELECTION

Scroll through the four Action Menus using the two navigational keys discussed earlier. At each screen, choose the ? selection to familiarize yourself with the various Help Screens.

Take a look at Action Menu 1. You now know that this menu contains two navigational selections and a help selection. The four feature selections for Action Menu 1 are:

- **Lesson** – Provides context-sensitive information regarding use of operating panel, availability of help, and Tyco Integrated Security help telephone number.
- **See alarms** – Lists all current alarms by type, point number, and point description.
- **Turn on** – Activates one, some, or all of the protection groups in either the AWAY or STAY mode.
- **Reset** – Takes you to Reset Submenu 1.

## ***Quick Start (cont'd)***

---

### **EXERCISE: LESSON**

Enter your ID code and observe Action Menu 1. Press **Lesson**. Read text, then press **More** to scroll through text. Note Tyco Integrated Security phone number on last screen. Press **Quit**.

### **EXERCISE: SEE ALARMS**

**See alarms** allows you to review all current alarm conditions. Enter your ID code and choose **See alarms**. At this time there are no alarms, so the screen will display “No current alarms or trouble points.” If there were, an alarm or trouble display would show the condition and description of it. Press **Next** and **Previous** to scroll through alarms. Press **Quit** to return to Action Menu 1.

### **EXERCISE: TURN ON BURGLARY PROTECTION**

Enter your ID code and observe Action Menu 1. Press **Turn on**. Choosing this enables you to turn the group(s) on in either the AWAY or STAY mode. Once you select the mode, you can scroll through your burglary groups using the **Previous** and **Next** selections. Try it. To turn specific groups on, press the key to the right of the group name when that group's identification is displayed. To turn on all groups, press **All**. Press **Quit** to return to Action Menu 1.

## Quick Start (cont'd)

### Action Menu 2

▶	◀ ?	Enter choice:	◀
▶	◀ See points	Test ▶	◀
▶			◀
▶	◀ Previous	More ▶	◀

Action Menu 2 has three feature selections:

- **See points** – Displays the number, description and current status of each protection point.
- **Change close time** – Changes the close (system on) time of protection groups.
- **Test** – Takes you to the Test Submenu for testing of protection groups, points, holdup devices, and/or the bell and display.

#### EXERCISE: SEE POINTS

From Action Menu 2, choose **See points** to enter a submenu. Press Supervisory, Burglary, Holdup, or Fire (depending on services being provided). If Burglary is selected, select which group. Press **Installed**. This will show you the first point of the selected service. If there is more than one point in this service, press **Next** to see the next point. **NOTE:** Next and Previous will not be displayed if there is only one point in that service. Press **Quit** to return to Action Menu 2.

#### EXERCISE: TEST

The test function is used for testing points, groups, and alarm functions of your security system. To explore this function, enter your ID code and enter Action Menu 2 by pressing **More** at Action Menu 1. Press **Test** to go to the Test Submenu. Press **More** to display Test Submenu 2. Press **Quit** to return to Action Menu 2.

## Quick Start (cont'd)

---

### Action Menu 3

▶	◀ ?	Enter choice:	◀
▶	◀ Bypass	History ▶	◀
▶	◀		◀
▶	◀ Previous	More ▶	◀

Action Menu 3 is your starting point for most time-related, power status, and bypass functions. It has four feature selections:

- **Bypass** – Bypasses and unbypasses protection points, displays the number of points within each group that can be bypassed, or bypasses Vault Vibration Sensor points. Bypassing a point causes the system to ignore that point until it is restored to normal operation (unbypassed). Bypassing may be used to ignore a malfunctioning device, such as repair, maintenance, or construction.
- **Status** – Checks status of AC power, standby battery power, and the telephone line.
- **History** – Displays or prints the most recent 500 system events, including user, time, and date of the occurrence of each event.
- **Time** – Displays, modifies, or enters time-related functions such as holidays, open/close schedules, daylight savings, current time/date, and the open/close schedule in case of an ambush.

## Quick Start (cont'd)

### EXERCISE: BYPASS/UNBYPASS PROTECTION POINTS

Enter your ID code and press **More** twice to display Action Menu 3. Choosing **Bypass** leads you to the **Bypass** selection menu. (You must have a Bypass BA privilege. If not, you will not see Bypass). Selecting **Burglar** will bring you to the Group Selection menu for the BA groups. You may now scroll through the list of your burglary groups using the **Previous** and **Next** selections. (This is automatically skipped if only one BA group is being used). Choose one of the groups and press the key next to the name of the group to display the Bypass Submenu. Choose **Bypass points** to display point number, status, description, and additional selector keys. Use **Previous** and **Next** to navigate through a listing of specific points. To choose a point, press **Bypass**. (Notice that Bypass changes to Unbypass.) Unbypass that point by pressing **Unbypass**. Press **Quit** to return to Action Menu 1.

▶	◀ ?	Bypassing:	◀
▶		Bypass points ▶	◀
▶			◀
▶	◀ Quit	Bypass VVS ▶	◀


### EXERCISE: HISTORY LOG

Enter your ID code and scroll to Action Menu 3. To display the last 500 events by date, time and type, press **History** and select **On this screen**. The most recent event is displayed first. **PgDn** displays additional information about an event, including the user name, point, and group descriptions. **PgUp** returns you to the original information. To scroll through the events, use **Prev** and **Next**. At any time you may select **Quit** to return to the History Selection Menu. To obtain a hard copy of the history log, select **On printer** from this menu. Pressing **Quit** again will return you to Action Menu 1.

## Quick Start (cont'd)

---

### Action Menu 4

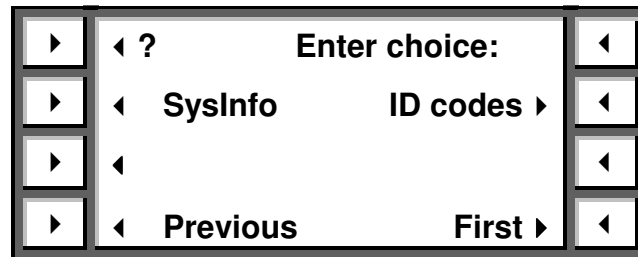

Action Menu 4 contains four feature selections:

- **SysInfo** – Displays model number, revision, and date of your FOCUS® CADET system.
- **Name pnt/gps** – Displays or changes the name, number, and type of each protection point or group.
- **ID codes** – Changes user names, group access, privileges, card/key number, cancel dates, and/or adds/changes the ID code of the first 99 users.
- **Load** – Downloads changes into the system from a remote Tyco Integrated Security Service Terminal.


#### EXERCISE: NAME PNT/GPS

This exercise uses both the menu screens and the numeric keypad. Enter your ID code and scroll to Action Menu 4 using the **More** key. Choose **Name pnt/gps** to display the first BA group description. The FOCUS® CADET lists the groups first, then card/key readers, then points. If you are familiar with your protection point ID numbers, you may go directly to a point by entering its corresponding three-digit number on the keypad.

Pressing **Change** now displays the selector keys for entering a new description for a point or group from the Character Entry Screen.



## Quick Start (cont'd)

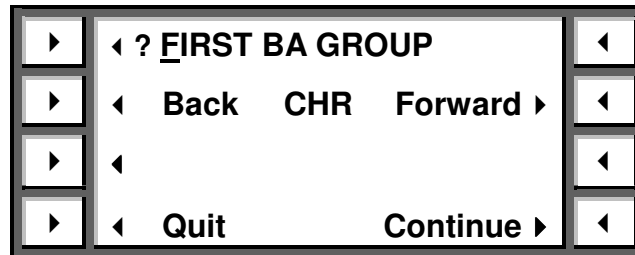

The first line of the screen displays the current name with the cursor on the first letter of the description. Use the **POS** (Cursor Position) keys to move the cursor to the right and left through the description. Use the **CHR** (Character) keys to scroll forward and backward through the character list (letters, numbers, symbols, and spaces).

Similarly, you may change characters directly by using the alphanumeric keypad, which is organized like the TouchTone dial on a telephone.

Experiment with the alphanumeric keypad. The keypad allows you to insert a character, space, number, or symbol at any location within the group, point, or user name:

- **Letters** are entered by pressing the key corresponding to them on the keypad. Pressing a key once, twice, or three times enters the first, second, or third letter shown on the button. For example, press the **5** key three times to enter the letter **L**. The letters **Q** and **Z** are the fourth letters for the **7** and **9** keys, respectively.
- **Numbers** are entered by pressing the **0** key once to enter the number 0, or by pressing the **0** key repeatedly to scroll through the numbers until the correct one is displayed.
- **Spaces** are entered by pressing the **1** key.
- **Symbols** are accessible by pressing the **1** key and scrolling through the entire character set using the **CHR** (backward and forward) keys.  
*Hint: Scrolling through the entire alphabet will take less time if you hold the keys down instead of pressing and releasing them.*

## ***Quick Start (cont'd)***

---


### **Summary**

After reading through the Quick Start section and going through the exercises, you should be familiar with the operating panel of the FOCUS® CADET security system. If you are uncertain of any operation, return to that part of this section and repeat the exercise.

## System Operation Overview

### Operating Panel

Your FOCUS® CADET security system is controlled through interactive operating panels consisting of a numeric keypad for entering data; a four-line, 17-character (per line) display; and 8 selector buttons for choosing operating functions.

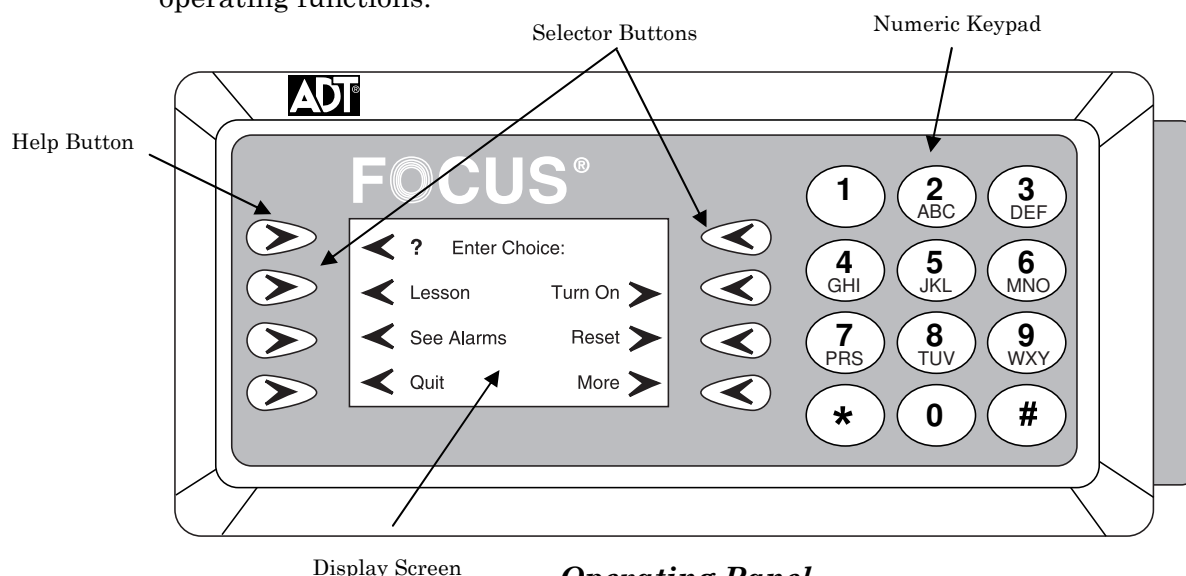

*Operating Panel*

Your “key” to the system is your personal 6-digit identification code, which provides access to all operating functions. The system can be programmed to limit the operational capabilities of each ID code and user.

As each digit of an ID code is entered from the numeric keypad, the operating panel will emit a short beep. When the final digit of a valid ID code is entered, the operating panel will emit a longer beep, signifying the ID code was accepted.

**NOTE: If you enter 18 incorrect digits, the operating panel will go into “lock-out,” preventing further entries for 60 seconds.**

## ***System Operation Overview (cont'd)***

---

As selector buttons are pressed, the operating panel will display system status, selection menus, prompts, and help screens to guide the user through the various operational capabilities assigned to that user. The messages displayed on the operating panel can be customized by programming unique descriptions for the name of each protective point, group of protective points, holiday, and users.

**NOTE: The operating panel remains “active” for 10 seconds after the entry of a valid ID code. However, pressing a selector button within the initial 10 seconds extends the “active” period to 60 seconds.**

Upon entry of a valid ID code, the operating panel will display the first of four Action Menus. These Action Menus display all the operating functions the user can access. To choose a displayed function, simply press the corresponding selector button.

If you encounter a problem or require additional information during the operation of the system, simply press the Help button located in the upper-left corner of the operating panel. The display will then provide instructions and information associated with the specific items displayed on the screen. The use of the "Help" button will not interfere with the system operation in process. Press **Quit** or the upper-left button again to exit the Help display.

If a system trouble or error message is displayed, refer to the *TROUBLESHOOTING GUIDE* section. It provides a list of these messages, a brief explanation of each message, and the required action to resolve the problem.

**NOTE: The contrast of the display screen can be adjusted at any time. Simply press the [0] and [#] keys simultaneously which are located on the numeric keypad. The contrast adjustment options will be shown on the display screen. To increase the contrast, press the “CONTRAST (+)” selector button. To decrease the contrast, press the “CONTRAST (-)” selector button.**


## ***System Operation Overview (cont'd)***

---

### **Action Menus**

Upon the entry of a valid ID code, the operating panel will display the first of four Action Menu screens. These menus are the starting point for all operating functions that can be accessed (except turning off the system). To choose a displayed function, simply press the corresponding selector button.

#### **Action Menu 1**

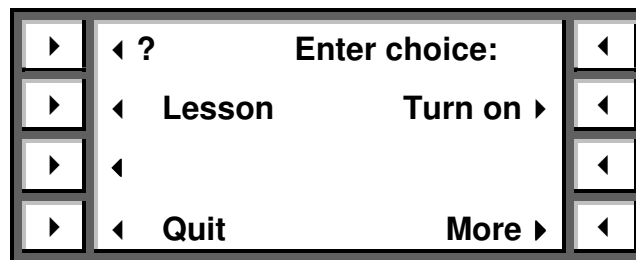

**?** Help. Provides information regarding all other items currently displayed on the operating panel. Help can be selected at any time without interfering with the operation in process.

**Lesson** Provides information regarding use of the operating panel and the availability of Help messages.

**See alarms** Provides a description of all current alarms by type, point number, and point description.

**Quit** Exits a menu or deactivates the operating panel display.

**Turn on** Turns on all or a portion of the system burglary protection groups in either the AWAY or STAY mode.

**Reset** Resets (clears) alarms and test modes.

**More** Displays the next Action Menu, more information, or additional operating functions.

## ***System Operation Overview (cont'd)***

---

### **Action Menu 2**

▶	◀ ?      Enter choice:	◀
▶	◀ See points      Test ▶	◀
▶		◀
▶	◀ Previous      More ▶	◀

**See points** Displays the number description and current status of each protection point.

**Change close time** Changes the close time (system on) of a protection group(s).

**Previous or Prev** Returns to the previous display.

**Test** Tests protection groups, points, holdup devices, and/or bell and operating panel display.

## System Operation Overview (cont'd)

### Action Menu 3

▶	◀ ?	Enter choice:	◀
▶	◀ Bypass	History ▶	◀
▶	◀		◀
▶	◀ Previous	More ▶	◀

**Bypass** Bypasses (ignores) or unbypasses (restores to normal operation) protection points, displays the number of points within each group that can be bypassed, or bypasses Vault Vibration Sensor (VVS) points.

**Status** Checks AC power, standby battery power, and the telephone line.

**History** Displays or prints the 500 most recent system events including user, time, and date for each event.

**Time** Displays, enters, or changes the following time-related functions:

- **Holiday** – The name and date of each scheduled holiday.
- **Open/Close** – Temporary and permanent daily opening/closing schedules and limits (i.e., earliest opening and latest closing).
- **Daylight** – The dates of daylight savings time (spring and fall).
- **Hstg** – The open/close schedule for an ambush condition (forced open/close).
- **Current** – The current time and date.

## ***System Operation Overview (cont'd)***

---

### **Action Menu 4**

▶	◀ ? Enter choice:	◀
▶	◀ SysInfo ID codes ▶	◀
▶	◀	◀
▶	◀ Previous First ▶	◀

**SysInfo** Displays the model number, revision, and date of your FOCUS® CADET security system.

**Name pnt/gps** Displays or changes the name, number, and type of each protection point and group.

**ID codes** Displays or changes user or group access names, access privileges, user card/key numbers, the user ID code of the first 99 persons, and cancel dates.

**Load** Loads changes into your system from a remote Tyco Integrated Security Service Terminal.

**First** Return to Action Menu 1.



# System Programming

---

## Introduction

Your FOCUS® CADET security system is easily customized to meet your specific security and monitoring requirements. During installation, your Tyco Integrated Security representative will review all system options and will recommend certain features and functions to accommodate your facility and daily business routines.

Certain system features and functions can be reprogrammed (changed) from your remote operating panel. However, to program or reprogram your system, you must use an ID code that has been assigned with the appropriate “privilege level” (see *User Data* later in this section).

You can enter, display, add, delete, and/or change system data from your operating panel. However, as changes are made, keep accurate and up-to-date records to avoid potential errors in the future.

**NOTE: Certain system features and functions must be controlled from the Tyco Integrated Security Customer Monitoring Center. Prior to modifying your system, it is advisable to check with your Tyco Integrated Security Service Representative.**

Your interactive operating panel provides four lines of information and/or messages that prompt you through a simple selection process. If you are unsure of a procedure, or require additional information or explanation of a feature or function, simply press the "Help" selector button. You can use the "Help" button at any time without interfering with the operation in process.

## User Data

Your FOCUS® CADET system accommodates up to 99 different six-digit ID codes. Users must be assigned an ID code in order to access the operating panel. The first two digits represent the user number. The last four serve as the Personal Identification Number (PIN), which uniquely identifies the person operating the system. Without a valid ID code, a user will not be able to access or operate the system.

## ***System Programming (cont'd)***

---

Once an ID code is assigned to a user, that user may automatically perform the following functions:

- Turn on/off assigned Burglary Protection.
- Test system sounders.
- Test burglary points.
- View/print the system's history log.

Each code may also be assigned a specific "Privilege Level(s)" that provides access to additional system operating functions (see *Assigning Privilege Levels* later in this section). If a user does not have the privilege to operate a function, it will not be displayed as a selection choice.

**NOTE: Upon installation or initial system setup, one user (e.g., System Manager) will be assigned the "Privilege Level" to perform the following functions:**

- **Open outside of the schedules (Irregular open).**
- **Bypass burglar alarm (BA) protection points.**
- **Change temporary schedules.**
- **Change permanent daily schedules and the real-time.**
- **Change, add, and delete user names, ID codes, card/key codes, cancel dates, and "Privilege Levels" for users.**

### **Entering or Changing a User Name**

Use the following procedure to add new users, change an existing user's access, or delete existing users from the system.

1. Using the operating panel's numeric keypad, enter a valid ID code that has been assigned the privilege level of "Can change names."
2. Press the **More** button three times to display Action Menu 4.
3. Press **ID codes** to display the User Selection Menu. **NOTE:** If **ID codes** is not displayed, you do not have the privilege level of "Can change names." Consult your manager or Tyco Integrated Security Service Representative.

## System Programming (cont'd)

### User Selection Menu

▶	◀ ?	User Name	◀
▶	◀ User xxx	Delete ▶	◀
▶	◀		◀
▶	◀ Quit	Next ▶	◀

4. Press **Prev** or **Next** to display the specific user name and user number to be changed or added.

*Hint: To go directly to the user, enter one-to three-digit user number on the numeric keypad.*

5. Press **Change** to display the Character Entry Screen to change the user name.

The first line of the screen displays the current name with the cursor on the first letter of the description.

6. Use the **POS** (Cursor Position) keys to move the cursor to the right and left through the description. Use the **CHR** (Character) keys to scroll forward and backward through the character list (letters, numbers, symbols, and spaces).

Similarly, you may change characters directly by using the alphanumeric keypad, which is organized like the TouchTone dial on a telephone.

- **Letters** are entered by pressing the key corresponding to them on the keypad. Pressing a key once, twice, or three times enters the first, second, or third letter shown on the button. For example, press the **5** key three times to enter the letter **L**. The letters **Q** and **Z** are the fourth letters for the **7** and **9** keys, respectively.
- **Numbers** are entered by pressing the **0** key once to enter the number 0, or by pressing the **0** key repeatedly to scroll through the numbers until the correct one is displayed.

## System Programming (cont'd)

---

- **Spaces** are entered by pressing the **1** key.
- **Symbols** are entered by pressing the **1** key, then using the **CHR** (backward and forward) keys to scroll through the entire character set.

*Hint: Scrolling through the entire alphabet will take less time if you hold the keys down instead of pressing and releasing them.*

7. Press **Continue** to display the User Selection Menu again.  
Repeat steps 4 through 6 to change the name of other users.
8. Press **Quit** to display Action Menu 4.

### Deleting a User ID Code

Use this function to eliminate a user's access to the security system.

1. Using the operating panel's numeric keypad, enter a valid ID code that has been assigned the privilege level of "Can change names."
2. Press the **More** button three times to display Action Menu 4.
3. Press **ID codes** to display the User Selection Menu. **Note:** If **ID codes** is not displayed, you do not have privilege level of "Can change names." Consult your manager or Tyco Integrated Security Service Representative.

#### User Selection Menu

▶	◀ ?	User Name	◀
▶	◀ User xxx	Delete ▶	◀
▶	◀		◀
▶	◀ Quit	Next ▶	◀

4. Press **Prev** or **Next** to display the specific user name and user number to be deleted.

*Hint: To go directly to the user, enter the one- to three-digit user number on the numeric keypad.*

## System Programming (cont'd)

5. Press **Delete** to delete the User Name, ID code, Burglary group access, privilege levels, card/key code, and cancel date. **NOTE:** If **Delete** is not displayed, contact Tyco Integrated Security for removal of this user from the system.
6. Press **Continue** to display the User Selection Menu again.  
To delete other users, repeat steps 4 through 6.
7. Press **Quit** to display Action Menu 4.

### Assigning or Changing User Access

Use the following steps to assign or change a user's access to burglary groups, privilege levels, ID code, card/key code, and/or code and card cancel date.

1. Using the operating panel's numeric keypad, enter a valid ID code that has been assigned the privilege level of "Can change names."
2. Press the **More** button three times to display Action Menu 4.
3. Press **ID codes** to display the User Selection Menu. **Note:** If **ID codes** is not displayed, you do not have privilege level of "Can change names." Consult your manager or Tyco Integrated Security Service Representative.

#### User Selection Menu

▶	◀ ?	User Name	◀
▶	◀ User xxx	Delete ▶	◀
▶	◀		◀
▶	◀ Quit	Next ▶	◀

4. Press **Prev** or **Next** to display the specific user name and user number to be changed or added.

## System Programming (cont'd)

---

*Hint: To go directly to the user, enter the one- to three-digit user number on the numeric keypad.*

5. Press **Change** to display the desired user name.
6. Press **Continue** to display the first Burglary (BA) group description. This screen also shows the user's access privilege for the BA group displayed ("Can access & open," "Can access," "Can access irr & open," or "Can not access").

Refer to *Table 1: Access Capability* later in this section.

### Assigning Burglary Group Access

7. To change the user's access and open privilege to the BA group displayed, press **Change** or to display the user's access privilege to the next BA group, press **Continue**.
8. To assign access and open privileges for this user to each BA group, repeat step 7.
9. Once you have assigned access to all the BA groups (pressing **Continue** at the last BA group), the operating panel will automatically display the Privilege Level Selection Menu.

### Assigning Privilege Levels

Once an ID is assigned the user may automatically perform the following basic functions:

- Turn on/off assigned burglary protection.
- Test system sounders.
- Test burglary points.
- View/print the system's history log.

**NOTE: To change the privilege level of a user, an ID code must have this capability assigned to it during the initial setup and programming of the system by Tyco Integrated Security.**

Each code may also be assigned one or more of the following privilege levels:

## ***System Programming (cont'd)***

---

- **Open irregular** – Open (turn off) BA group(s) outside of the scheduled opening time. A user without this privilege level will trip an irregular opening alarm or be denied access if a BA group is turned off before the opening time, after the closing time, or on a holiday.
- **Bypass BA** – Bypass and unbypass all assigned burglary points.
- **Change temp sched** – Change temporary daily schedules, closing times, and limited time changes.
- **Change perm sched** – Change permanent daily schedules, earliest open times, latest closing times, date, and unlimited time changes.
- **Change names** – Add, change or delete user names, group access, privilege levels, ID codes, card/key codes, cancel dates, BA group descriptions and point descriptions.

10. Press **Change** to select whether the user “Can” or “Can not” perform the operating function displayed.

11. Press **Continue** to move to the next operating function.

Repeat steps 10 and 11 until the appropriate privilege level has been assigned for each operating function.

Once you have assigned all privilege levels for this user, the operating panel will display “User Name” and whether the user ID code “may” or “may not” be changed.

12. If the user “may” be changed, and you desire to change or assign the user's ID code, press **Change** and continue with step 13. Otherwise, press **Continue** and skip to step 18.

## System Programming (cont'd)

**Table 1: Access Capability**

Access Capability	Time	Condition of BA Group(s)	Access Action	CMC Signal	Log and Print	Programming Required
Person can open and access any time.	Inside or Outside Schedule	On	Open and Access	Opening	Opening	Access irr & open <i>plus</i> can open irregular
		Off	Access	No Signal	Access (1)	
Same as above, but an irregular event will be flagged for access outside of schedule (PVF).	Inside Schedule	On	Open and Access	Opening	Opening	Access irr & open <i>Plus</i> can <u>not</u> open irregular
		Off	Access	No Signal	Access (1)	
	Outside Schedule	On	Open and Access	Irregular Opening (PVF)	Irregular Opening	
		Off	Access	No Signal	Irregular Access	
Person can open and access, but only within schedule.	Inside Schedule	On	Open and Access	Opening	Open and Access	Can access & open <i>plus</i> can <u>not</u> open irregular
		Off	Access	No Signal	Access (1)	
	Outside Schedule (2)	On	No Access	No Signal	No Access	
		Off	No Access	No Signal	No Access	
Person cannot open, but can access within schedule.	Inside Schedule	On	No Access	No Signal	No Access	Can access <i>plus</i> can <u>not</u> open irregular
		Off	Access	No Signal	Access (1)	
	Outside Schedule (2)	On	No Access	No Signal	No Access	
		Off	No Access	No Signal	No Access	
Person cannot gain access at any time.	Inside or Outside Schedule	On	No Access	No Signal	No Access	Can <u>not</u> access
		Off	No Access	No Signal	No Access	

**NOTES:** 1. Nothing will be logged or printed if the Log Option = N. Selectable for each reader.  
 2. Access can be granted by establishing a temporary schedule.



## ***System Programming (cont'd)***

---

### **Assigning a User ID Code**

The ID code is used to access the operating panel. The first two digits of the ID code are the user number. The number to be entered is the unique four-digit PIN. Choose a number that is easy to remember, but is still difficult for others to guess.

13. Press **Change** to display the ID Code Entry screen.

**NOTE: If this user number has an existing ID code, the existing four-digit PIN will not be displayed.**

14. Using the operating panel's numeric keypad, enter the four-digit user PIN. Each digit is displayed as entered.

15. Press **Enter** to enter the new user ID code into the system.

16. Press **Continue** to assign this user a card/key code (go to step 18 below).

17. Press **Quit** to return to Action Menu 4.

### **Assigning a User a Card/Key Code**

18. Go to the nearest card/key reader and swipe the card through the reader or insert and remove the key. The red lamp on the reader will flash and the key or card number will be displayed.

19. Press **Continue** if a cancel date is desired, and continue with step 21.

20. Press **Quit** to return to the User Selection Menu.

### **Assigning a Code and Card Cancel Date**

A date valid for up to one year can be assigned to a user, after which the user's ID code and card/key code will be automatically deleted from the system. Use this feature only for temporary help or construction personnel who will not need access after a job is completed.

21. Using the operating panel's numeric keypad, enter the month (1-12) and day (1-31) that this user will be automatically deleted from the system.

22. Press **Enter** to enter the new user ID code cancel date into the system.

23. Press **Quit** to return to the User Selection Menu.

## System Programming (cont'd)

---

### Changing the Time and Date

Your FOCUS® CADET security system contains a real-time clock and calendar, which must be programmed at the time of installation. Periodically check the clock and calendar to ensure their accuracy. The time and date may require re-entering if both AC power and battery power have been interrupted or disconnected. If a change is required, complete the steps below.

#### Changing the Current Time

**Note:** Before changing the time or date, turn off all BA groups.

1. Using the operating panel's numeric keypad, enter a valid ID code that has been assigned the privilege level of "Change perm sched" or "Change temp sched."
2. Press **More** twice to display Action Menu 3.
3. Press **Time** to display the Time Selection Menu.

#### Time Selection Menu

▶	◀ ? Time:	◀
▶	◀ Holiday Daylight ▶	◀
▶	◀	◀
▶	◀ Quit Current ▶	◀

4. Press **Current** to display the current time and date settings of the system.
5. Press **Change** to display the selector buttons "Change time" and "Change date."

**NOTE:** Change will not appear unless all BA groups are off.

## ***System Programming (cont'd)***

---

6. Press **Change time** to display the time currently set in the system.
7. Using the operating panel's numeric keypad, enter the new time.  
**NOTE: Those users who have been assigned only the privilege level of "Change temp sched" are limited to time changes within 5 minutes of the current time displayed on the screen.**
8. Press **AM** or **PM** to complete your entry and display the new time and date.
9. Press **Quit** to display the Time Selection Menu.

### **Changing the Current Date**

Perform the first 5 steps under the previous heading *Changing the Current Time* and then continue with step 6 here.

**NOTE: Before changing the time or date, turn off all BA groups.**

6. Press **Change date** to display the date currently set in the system.
7. Using the operating panel's numeric keypad, enter the new date.  
*Example: October 7th, 1998 is entered as 100798.*
8. Press **Enter** to complete your entry and display the new date and time.
9. Press **Quit** to display the Time Selection Menu.

### **Setting Dates for Daylight Saving Time**

Your FOCUS® CADET security system will automatically adjust the real-time clock for daylight saving time on the two dates programmed into the system. To program those dates do the following:

1. Using the operating panel's numeric keypad, enter a valid ID code that has been assigned the privilege level of "Change perm sched" or "Change temp sched."
2. Press **More** twice to display Action Menu 3.
3. Press **Time** to display the Time Selection Menu.

## ***System Programming (cont'd)***

---

4. Press **Daylight** to display “Spring Daylight” description and programmed date.
5. Press **Previous** or **Next** to toggle between “Spring Daylight” description and “Fall Daylight” description and the date you want to change.
6. Press **Change** to display the selector buttons for entering a new spring or fall description.
7. Press **Continue** to display current and new date entry field.
8. Using the operating panel’s numeric keypad, enter the new date.  
*Example: April 9th is entered 0409.*
9. Press **Enter** to complete your entry and display the new date.
10. Press **Quit** to display the previous screen. Repeat steps 5 to 9 for the second date.
11. Press **Quit** to display the Time Selection Menu.

### **Daily Operating Schedules**

Your FOCUS® CADET system can accommodate two distinct daily operating schedules (two opening times and two closing times) for each day of the week for each Burglary (BA) group. Daily operating schedules may be used to restrict access to the facility and/or system. Users who have not been assigned “open regular” privilege will be denied access (key or card access control) or will trip an irregular opening alarm if a BA group is turned off outside the schedules or on holidays. These schedules also enable your system to automatically alert the Tyco Integrated Security Customer Monitoring Center if the burglary protection was turned on at the proper time. Your system can also accommodate schedule limits, which prevent schedule changes that are outside the schedule limits.


## System Programming (cont'd)

Schedules can be permanent or temporary. A permanent schedule is fixed, and remains in effect until it is changed (by an authorized user). A temporary schedule will override the permanent schedule for one day only. It is automatically deleted at midnight of the day it took effect. For example, on a Friday, a temporary closing time of 8:00 PM is programmed into the system to override the permanent schedule closing time of 5:00 PM. It will affect that day's (Friday's) schedule only. The 8:00 PM temporary closing time will be automatically deleted at midnight, thus restoring the permanent closing time of 5:00 PM for future Fridays.

### Changing Daily Operating Schedules

Use the following procedure to re-program (change) the daily operating schedules.

1. Using the operating panel's numeric keypad, enter a valid ID code that has been assigned the privilege level of "Can change perm schedule."
2. Press **More** twice to display the Action Menu 3.
3. Press **Time** to display the Time Selection Menu.

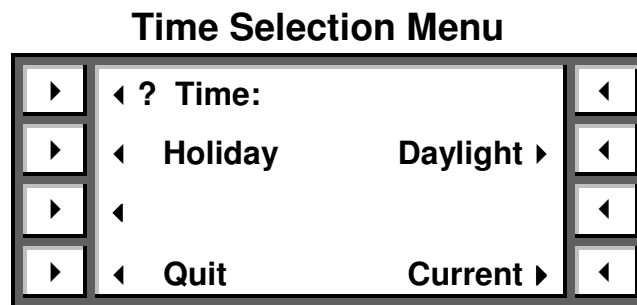

4. Press **Open/close** to display the "Group Description" selector button.
5. Press **Previous** or **Next** to display the desired "Group Description" of the schedule to be changed.

## ***System Programming (cont'd)***

---

6. Press the **Group Description** button to display the selector buttons "Daily schedules" and "Schedule limits."
7. Press **Daily schedules** to display the selector buttons "Permanent" and "Temporary."
8. Press **Permanent** or **Temporary** to display the current permanent or temporary open/close schedule.

*Hint: The system will start display with "today" (Mon-Sun).*

9. Press **More** to step through the daily schedules and to the specific daily schedule you would like to change.
10. Press **Change** to display the selector buttons "Open time" and "Close time."
11. Press **Open time** or **Close time** to display the open or close schedule entry screen.
12. Using the operating panel's numeric keypad, enter the new open or close time.

*Example: 8:22 is entered as 0822.*

13. Press **AM** or **PM** to complete your entry and to display the new open or close schedule.

**If Auto On/Off feature has been selected, see *Changing Auto On/Off Schedule*.**

14. Press **Change** to display the Auto On/Off options, or press **Quit** to display another daily operating schedule.

### **Guidelines for Changing Daily Operating Schedules:**

- UUUU indicates Unscheduled; enter desired time. NNNN indicates Not changeable; the schedule cannot be changed. Refer to your master system user.
- Open times cannot be later than closing times. Closing times cannot be earlier than open times.
- Pressing Delete when changing an opening time will tell the system that no opening will occur for that schedule. Persons without irregular access privilege will be denied access or will create an Irregular Open Alarm.

## ***System Programming (cont'd)***

---

### **Guidelines (continued):**

- Pressing Delete when changing a closing time will tell the system that no closing will occur for that schedule that day (up to midnight). Use this to tell the system when there is an early morning closing the next day. You must also program a 12:00 AM opening and a closing time (i.e., 3:00 AM) the next day.
- If your schedule is unpredictable, you may need to program a No Close time period. Upon opening the group, a timer can be preset with a number of hours and minutes you will be open that day. A closing timer will start when 20 minutes remain. A closing warning will start when only 5 minutes remain. If the warning and reminder are ignored, and the group is not closed, a No Close signal will be sent to the Tyco Integrated Security Customer Monitoring Center. To program a No Close time, first select the second schedule for the desired day. Second, delete the second opening time by pressing Change, Open time, Delete. Third, enter the number of hours and minutes you will be open on that day as the second closing time. For example, if you want two hours and 30 minutes, press Change, Close time, 0, 2, 3, 0, AM. Repeat the procedure for each day that this feature is desired.
- AM is used for less than 12 hours. If 12 to 24 hours is desired, subtract 12 hours from the desired length of time, enter the remainder, and press PM. For example, if you want 14 hours and 20 minutes, press Change, Close time, 0, 2, 2, 0, PM.
- The No Close time will take effect only when the group is opened. If you want the new time to take effect NOW, first turn on the group and then turn it off.
- The programming of the first schedule for each day is optional. If you do program the first schedule, openings outside the schedule can be restricted. For example, a first schedule opening time of 5:00 AM and a first schedule close time of 10:00 PM may restrict certain users from midnight to 5AM and from 10PM to midnight. Persons who open anytime will be required to close the group in the specified time period entered in the second close schedule as specified above.

### **Changing Auto On/Off Schedule**

Your FOCUS® CADET security system can accommodate an Auto On/Off feature. If enabled, the Auto On/Off feature enables your system to automatically turn itself on and off according to the daily operating schedule (permanent or temporary) that you have assigned. **The Auto On/Off feature is automatically deleted on holidays and can be cancelled by deleting a schedule.**

## ***System Programming (cont'd)***

---

For maximum security, the Auto On/Off feature is not recommended. If Auto Off is enabled, burglary protection will automatically be turned off regardless of unforeseen events, possibly allowing unauthorized personnel to enter the premises. If Auto On is enabled, burglary protection will automatically be turned on, which could lead to the generation of a false alarm if personnel are within a protected area.

There are four Auto On/Off options that you may select from. It is recommended that you discuss these with your Tyco Integrated Security Service Representative to determine which one, if any, would be appropriate for your particular application.

The four options are:

Manual on	Manual off
Automatic off	Manual on
Automatic on	Manual off
Automatic on	Automatic off

**Manual:** The user must perform the on/off function.

**Automatic:** The system automatically performs the on/off function.

The Auto On/Off feature is separately programmed for each group and daily operating schedule. For example, you can select Auto Off for Burglary Group 1 on Saturday and Sunday only.

If your system was programmed with the Auto On/Off feature at the time of installation, simply follow the steps under *Changing Daily Operating Schedules*. Once you have entered AM or PM at step 13, the display will indicate whether the system **can** or **cannot** turn itself on or off at that time.

15. Press **More** to display the next daily operating schedule to be changed; or press **Quit** to display the Time Selection Menu.



## System Programming (cont'd)

### Changing Open/Close Schedule Limits

Use the procedure below to change the earliest open times and the latest close times for the system.

1. Using the operating panel's numeric keypad, enter a valid ID code that has been assigned the privilege level of "Can change perm sched."
2. Press **More** twice to display Action Menu 3.
3. Press **Time** to display the Time Selection Menu.

#### Time Selection Menu

▶	◀ ? Time:	◀
▶	◀ Holiday Daylight ▶	◀
▶	◀	◀
▶	◀ Quit Current ▶	◀

4. Press **Open/close** to display "Group Description" selector buttons.
5. Press **Previous** or **Next** to display the desired "Group Description" of the schedule to be changed.
6. Press the "**Group Description**" button to display the "Schedule limits" selector button.
7. Press **Schedule limits** to display the limits currently set in the system.
8. Press **Change** to display selector buttons "Earliest open" and "Latest close."
9. Press **Earliest open** or **Latest close** to display the current earliest open and latest close time.
10. Using the operating panel's numeric keypad, enter the new earliest open or latest close time (enter hours only).

## System Programming (cont'd)

---

11. Press **AM** or **PM** to complete the entry and to display the new schedule limits.
12. Press **Change** to re-enter an earliest open or latest close time, or press **Quit** to display other schedule options.

### Holiday Description and Dates

Your FOCUS® CADET security system can accommodate up to 14 holiday descriptions and dates. Holidays are dates on which your entire facility (all BA groups) is closed.

Any employee who has been assigned the privilege level of "Cannot open irregular" will not be granted access (if using card access) or will trip an irregular opening alarm if a BA group is turned off anytime during that holiday.

If automatic-off has been selected, groups will not turn off on a holiday.

### Adding or Changing Holiday Descriptions

To add or re-program (change) holiday descriptions and dates, follow the steps below.

1. Using the operating panel's numeric keypad, enter a valid ID code that has been assigned the privilege level of "Can change perm sched."
2. Press **More** twice to display Action Menu 3.
3. Press **Time** to display the Time Selection Menu.

#### Time Selection Menu

▶	◀ ? Time:	◀
▶	◀ Holiday Daylight ▶	◀
▶	◀	◀
▶	◀ Quit Current ▶	◀

## ***System Programming (cont'd)***

---

4. Press **Holiday** to display holiday descriptions and dates.
5. Press **Previous** or **Next** to display the holiday description and date you want to change, or to display an unassigned holiday description and date.
6. Press **Change** to display the selector buttons for entering the new holiday description.

The first line of the screen displays the current name with the cursor on the first letter of the description.

7. Use the **POS** (Cursor Position) keys to move the cursor to the right and left through the description. Use the **CHR** (Character) keys to scroll forward and backward through the character list (letters, numbers, symbols, and spaces).

Similarly, you may change characters directly by using the alphanumeric keypad, which is organized like the TouchTone dial on a telephone.

- **Letters** are entered by pressing the key corresponding to them on the keypad. Pressing a key once, twice, or three times enters the first, second, or third letter shown on the button. For example, press the **5** key three times to enter the letter **L**. The letters **Q** and **Z** are the fourth letters for the **7** and **9** keys, respectively.
- **Numbers** are entered by pressing the **0** key once to enter the number 0, or by pressing the **0** key repeatedly to scroll through the numbers until the correct one is displayed.
- **Spaces** are entered by pressing the **1** key.
- **Symbols** are entered by pressing the **1** key then using the **CHR** (backward and forward) keys to scroll through the entire character set.

*Hint: Scrolling through the entire alphabet will take less time if you hold the keys down instead of pressing and releasing them.*

8. Press **Continue** to enter a new holiday date, or press **Quit** to display another holiday description and date.

## System Programming (cont'd)

---

### Changing Holiday Dates

Complete steps 1 through 6 from *Adding or Changing Holiday Descriptions*.

7. Press **Continue** to display the current and new Holiday dates.
8. Using the operating panel's numeric keypad, enter the new date.  
*Example: January 1 is entered as 0101.*
9. Press **Enter** to complete your entry and to display the new date.
10. Press **Quit** to display the Time Selection menu.

### Group/Point Descriptions

Change group and point descriptions to define a burglary or other protection group, or to tailor group names to suit your specific needs. Change point descriptions whenever a sensor is added or moved in the system.

Follow the steps below to change the group or point descriptions.

1. Using the operating panel's numeric keypad, enter a valid ID code that has been assigned the privilege level of "Can change names."
2. Press the **More** button three times to display Action Menu 4.
3. Press **Name pnt/gps** to display group and/or point descriptions.
4. Press **Prev** or **Next** to display the group or point description and number you want to change.

**NOTE: Group descriptions will be displayed first. Press the Next button to scroll through the group descriptions and begin display of point descriptions.**

*Hint: To go directly to a point, enter the one- to three-digit point number on the numeric keypad.*

5. Press **Change** to display the selector buttons for entering a new description.

The first line of the screen displays the current name with the cursor on the first letter of the description.

## System Programming (cont'd)

---

6. Use the **POS** (Cursor Position) keys to move the cursor to the right and left through the description. Use the **CHR** (Character) keys to scroll forward and backward through the character list (letters, numbers, symbols, and spaces).

Similarly, you may change characters directly by using the alphanumeric keypad, which is organized like the TouchTone dial on a telephone.

- **Letters** are entered by pressing the key corresponding to them on the keypad. Pressing a key once, twice, or three times enters the first, second, or third letter shown on the button. For example, press the **5** key three times to enter the letter **L**. The letters **Q** and **Z** are the fourth letters for the **7** and **9** keys, respectively.
- **Numbers** are entered by pressing the **0** key once to enter the number 0, or by pressing the **0** key repeatedly to scroll through the numbers until the correct one is displayed.
- **Spaces** are entered by pressing the **1** key.
- **Symbols** are entered by pressing the **1** key, then using the **CHR** (backward and forward) keys to scroll through the entire character set.

*Hint: Scrolling through the entire alphabet will take less time if you hold the keys down instead of pressing and releasing them.*

## ***System Operation***

---

Your FOCUS® CADET security system is controlled through operating panels conveniently located throughout your facility. See *SYSTEM OPERATION OVERVIEW* section for detailed operating instructions and a description of the operating panel.

### **Turning On Burglary Protection**

Turning on burglary protection will probably be the most used (and most important) operation for most sites. Take extra time to practice securing and exiting your premises. Make sure other operators you depend on for site closings do the same.

If the operating panel is located within the protected area, you must enter and exit the premises through a pre-determined entry/exit door. If your system is programmed with an audible exit delay warning, the operating panel will beep (once every second) during the exit delay period. You must exit the protected area and close the exit door securely before the exit delay expires. A 4-second steady tone indicates the expiration of the exit delay. If you are detained and hear the 4-second tone, return to the operating panel, re-enter your ID code, and repeat the process for exiting.

**NOTE: If you do not exit the protected area prior to the expiration of the exit delay, an “exit fail” signal will be transmitted to the Tyco Integrated Security Customer Monitoring Center.**

The system can be turned on in either the AWAY or STAY mode. The STAY mode automatically bypasses certain point types. Check with your Tyco Integrated Security service technician to see if your system contains any of these point types.

### **Turning On ALL Burglary Groups**

Before turning on, be sure to secure (or bypass) all protection points.

1. Using the operating panel's numeric keypad, enter a valid ID code to display Action Menu 1.

## ***System Operation (cont'd)***

---

### **Action Menu 1**

▶	◀ ?	Enter choice:	◀
▶	◀ Lesson	Turn on ▶	◀
▶	◀		◀
▶	◀ Quit	More ▶	◀

2. Press **Turn on** to display Arming Mode screen (if STAY mode is enabled).
3. Select which arming mode (AWAY or STAY).
4. Press **All** to turn on all Burglary groups.
5. Secure and exit premises prior to the expiration of the exit delay (if applicable).

### **Turning On One or More Burglary Groups**

Use this function to turn on certain groups and leave others inactive. This is especially useful during opening and closing times. After turning off all Burglary groups, the first person on site may wish to turn a few Burglary groups back on before the rest of the employees arrive. For example, they may re-activate door alarms, but leave motion detectors inactive.

Before turning on, be sure to secure (or bypass) all protection points.

1. Using the operating panel's numeric keypad, enter a valid ID code to display Action Menu 1.
2. Press **Turn on** to display Arming Mode screen (if STAY mode is enabled).
3. Select which arming mode (AWAY or STAY). The system displays the Burglary group status.
4. Press **Previous** or **Next** to display the specific Burglary group to be turned on.
5. Press the "**Group description**" button to turn on that specific group.

## ***System Operation (cont'd)***

---

6. Press **Continue** to display Action Menu 1.
7. Repeat steps 2 through 5 to turn on additional groups.
8. If an outside sounder is installed and optioned, wait to hear a short "ding" before leaving. The sounder's failure to annunciate the "ding" indicates Tyco Integrated Security has not received the closing signal.

### **Turning On One or More Burglary Groups Using a Key or Card Reader**

Before turning on, be sure to secure (or bypass) all protection points.

1. Press the **Next** button at or near the entry door and exit the premises. The red lamp above the button will start to flash.

**NOTE: Failure of the light to flash indicates a door or window is open. Secure (or bypass) all protection and retry.**

2. Within one minute, insert and swipe the access key or card. The red lamp on the exit button will illuminate steadily. If you are using a key, turn the key and lock the door.

**NOTE: If the red lamp does not light, the system has not armed. If you are using a key, the cylinder will not turn and the door will not lock. Secure (or bypass) all protection and retry.**

3. If an outside sounder is installed and optioned, wait to hear a short "ding" before leaving. The sounder's failure to annunciate the "ding" indicates Tyco Integrated Security has not received the closing signal.

### **Turning Off Burglary Protection**

If the operating panel is located within the protected area, enter through a pre-determined entry door. The operating panel will emit a steady tone indicating the entry delay.

**NOTE: If you do not turn the system off prior to the expiration of the entry delay (steady tone stops), an alarm signal will be transmitted to the Tyco Integrated Security Customer Monitoring Center.**




## System Operation (cont'd)

### Turning Off ALL Burglary Groups

**Note:** All Burglary groups in alarm or entry delay will be automatically turned off when a valid ID code is entered. All other Burglary groups must be turned off manually.

1. Using the operating panel's numeric keypad, enter a valid ID code to display the Turn Off Menu.

#### Turn Off Menu

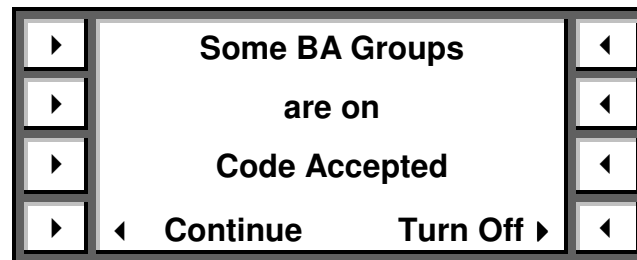

2. Press **Turn off** to display Burglary group description and additional selector buttons.
3. Press **All** to turn off all Burglary groups.
4. Press **Continue** to display Action Menu 1.

### Turning Off One or More Burglary Groups

**NOTE:** All Burglary groups in alarm or entry delay will be automatically turned off when a valid ID code is entered. All other Burglary groups must be turned off manually.

1. Using the operating panel's numeric keypad, enter a valid ID code to display the Turn Off Menu.
2. Press **Turn off** to display Burglary group description and additional selector buttons.
3. Press **Previous** or **Next** to display the specific Burglary group to be turned off.

## ***System Operation (cont'd)***

---

4. Press the “**Group description**” button to turn off that specific group.
5. Repeat steps 2 through 4 to turn off additional groups.
6. Press **Continue** to display Action Menu 1.

### **Turning Off One or More Burglary Groups Using a Key or Card Reader**

1. Insert or swipe the access key or card. The green lamp will illuminate on the key/card reader. If you are using a key, turn the cylinder to unlock the door. If you are using a strike, pull the door open.

**NOTE: If the green lamp does not light and the red lamp “winks” out momentarily, it indicates the system is rejecting the access attempt.**

The system can reject access for the following reasons:

- a. User does not have “irregular open” privilege, and the present time is outside the schedule or is a holiday.
- b. “Lockout” option is selected, and the present time is outside the schedule or is a holiday.
- c. User does not have “open” privilege, and group(s) are on.
- d. User does not have “access” privilege to this group or area.

### **Resetting Current Alarms**

Resetting alarms is used after one or more alarms have been activated and you have determined that the situation has returned to normal.

1. Using the operating panel’s numeric keypad, enter a valid ID code to display Action Menu 1 (if no Burglary groups are on) or the Turn Off Menu (if Burglary groups are on) and to deactivate all annunciating devices.
2. If Burglary groups are on, complete the steps under the heading *Turning Off One or More Burglary Groups*. When all Burglary groups are off, press **Continue** to display Action Menu 1.
3. Press **Reset** to display the reset choices.

## ***System Operation (cont'd)***

---

4. Press **Alarms** to reset all points to which you have access. The display will indicate if all points have or have not been reset.
5. If all points have not been reset, press **See points** to display those points that have not been reset. Inspect those points and correct the problem.
6. If all points have been reset, press **Continue** to display Action Menu 1.

### **System History Log**

Your FOCUS® CADET security system stores up to 512 system events, including the user, time, and date of each occurrence. The history log includes the following events:

- Opening/closings of each Burglary group (including the name of the users).
- Schedule changes (including the name of the user who made the change).
- Alarms, by description and number of Burglary group and point.
- Trouble conditions, by description and number of point.
- Bypassed and unbypassed points, by description and number of Burglary group and point (including the name of the user who performed the function).
- Name of the user requesting the printout of the history log.
- Results of point tests.
- Optionally, all card/key accesses per reader.


### **Viewing the History Log**

1. Using the operating panel's numeric keypad, enter a valid ID code to display Action Menu 1.
2. Press **More** twice to display Action Menu 3.
3. Press **History** to display the History Selection Menu.

## ***System Operation (cont'd)***

---

### **History Selection Menu**

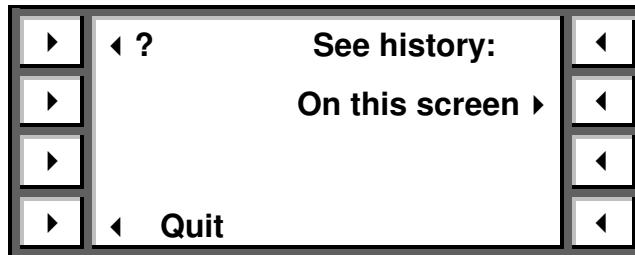

4. Press **On this screen** to display the last 500 system events (in chronological order, beginning with the most recent event). The events are displayed by date, time, and type.
5. Press **PgDn** to display additional information, including the user name, point, and group description.
6. Press **PgUp** to display the original event information.
7. Press **Prev** or **Next** to display additional events in the history log.
8. Press **Quit** to display the History Selection Menu.
9. Press **Quit** to display Action Menu 1.

### **Printing the History Log**

If a printer is installed, turned on, and selected complete steps 1 through 3 in *Viewing the History Log*. Then perform following steps:

4. Press **On printer** to display the printing options.
5. Press **Last 60 events** or **Last 500 events** to print the desired number of events.
6. The display will prompt you to check your paper supply (2 sheets to print 60 events or 10 sheets to print 500 events).
7. Press **Start print** to begin printing the history log.
8. Press **Stop print** to stop the printing of the history log; or press **Continue** to display Action Menu 3.

## ***System Operation (cont'd)***

### **History Log Alpha and Event Codes**

Description	Alpha
<b>System Event</b>	
System Reset	RESET
Reset Memory	RESET MEM
AC Fail	AC FAIL
AC Restore	AC RESTORE
AC Fail 4-Hour	AC FAIL 4H
AC Fail 4-Hour Restore	AC 4H RST
Telco Line Cut (built-in dialer)	TEL T MCUT
Telco Line Cut Restore (built-in dialer)	TEL R MCUT
Telco Line Cut (backup dialer)	TEL T BCUT
Telco Line Cut Restore (backup dialer)	TEL R BCUT
Communication Failure (built-in dialer)	TEL T MCOM
Communication Failure Restore (built-in dialer)	TEL R MCOM
Communication Failure (backup dialer)	TEL T BCOM
Communication Failure Restore (backup dialer)	TEL R BCOM
Low Battery System	LOW BAT
Low Battery System Restore	BATTERY RS
Battery Charger Fail	CHARG FAIL
Battery Charger Restore	CHARG RST
Change Date	CH DATE
<b>Expansion Module</b>	
Interactive Keypad Tamper	KEYPAD ALM
Interactive Keypad Trouble - Supervision	KEYPAD TBL
Interactive Keypad Trouble Restore	KEYPAD RST
Cardreader Alarm	READER ALM
Cardreader Trouble	READER TBL
Cardreader Trouble Restore	READER RST
Point Gateway Tamper Alarm	GATEWAY AL
Point Gateway Trouble - Supervision	GATEWAY TB
Point Gateway Trouble Restore	GATEWAY RS

## ***System Operation (cont'd)***

<b>Description</b>	<b>Alpha</b>
<b>Expansion Module (continued)</b>	
Printer Tamper Alarm	PRINTER AL
Printer Trouble – Supervision	PRINT TBL
Printer Trouble Restore	PRINT RST
RF Low Battery	RF LOW BAT
RF Point Low Battery Restore	RF LB RST
<b>Downloading</b>	
DLL Aborted	DLL ABORT
Start DLL	START DLL
DLL Interrupted	DLL INTER
End DLL Altered	END DLL AL
DLL Comm Fail	DLL COMM F
End DLL Not Altered	END DLL NA
<b>Burglary</b>	
BA Burglary Alarm	BURGLAR AL
BA Burglary Point Bypass	BA BYPASS
BA Burglary Alarm Restore	BURGLAR RS
BA Burglary Point Trouble	BURGLAR TB
BA Burglary Point Unbypass	BA UNBYP
<b>Open/Close</b>	
BA Auto Close	AUTO CLOSE
BA Auto Close with Bypass – within Group	AUTO CL BY
BA Trouble Closing (closed with burglary alarm during exit)	TBL CLOSE
BA Bypass Closing – within group	BYP CLOSE
BA Closing	CLOSING
BA Auto Open	AUTO OPEN
BA Irregular Opening	IRR OPEN
BA Opening	OPENING
BA No Close – Scheduled close time expired	NO CLOSE
BA Exit Fail – exit error (user)	EXIT FAIL

## System Operation (cont'd)

Description	Alpha
<b>Open/Close (continued)</b>	
BA Bypass Closing by User	BYPASS USR
BA STAY (Local) Arming	CLOSE STAY
<b>Fire</b>	
Fire Alarm	FIRE ALARM
Fire Trouble	FIRE TBL
Fire Alarm Restore	FIRE RST
Fire Alarm Silence	FA SILENCE
Fire Point Bypass	FA BYPASS
Fire Alarm Point Unbypass	FA UNBYP
Supervisory Alarm	CRIT ALARM
Supervisory Trouble	CRIT TBL
Supervisory Restore	CRITL RST
Supervisory Point Bypass	CRIT BYP
Supervisory Point Unbypass	CRIT UNBYP
Waterflow Alarm	WF ALARM
Waterflow Bypass	WF BYPASS
Waterflow Restore	WF RST
Waterflow Trouble	WF TBL
Waterflow Unbypass	WF UNBYP
<b>Panic</b>	
Holdup Alarm	HOLDUP ALM
Holdup Point Trouble – sensor trouble	HOLDUP TBL
Holdup Restore	HOLDUP RST
Holdup Point Bypass	HU BYPASS
Holdup Point Unbypass	HU UNBYP
Hostage Alarm – Duress	HHHHHHHHHH
Hostage Alarm Restore	HOSTAGE RST
Medical Alarm	MED ALARM
Medical Alarm Restore	MED RST
Medical Trouble	MED TBL

## ***System Operation (cont'd)***

---

<b>Description</b>	<b>Alpha</b>
<b>Panic (continued)</b>	
Medical Bypass	UT BYPASS
Medical Unbypass	U UNBYPASS
<b>Scheduling</b>	
Change Close Time	CH CLOSE T
Change Auto-On Level	CH AUTO ON
<b>Other</b>	
Supervised Bell Alarm	BELL ALARM
Supervised Bell Trouble	BELL TBL
Supervised Bell Trouble Restore	BELL RST
Remote Power Supply Alarm	POWER ALM
Remote Power Supply Trouble	POWER TBL
Remote Power Supply Trouble Restore	POWER RST
Keyswitch Alarm	KEY ALARM
Keyswitch Trouble	KET RST
Keyswitch Restore	KEY RST
Janitor Keyswitch Alarm	JANITOR AL
Janitor Keyswitch Trouble	JAN TBL
Janitor Keyswitch Alarm Restore	JAN RST
Janitor On Premises – user on premises	JANITOR ON
Janitor Off Premises – user on premises restore	JAN OFF
Tyco Integrated Security On-Premises	SERVICE ON
Tyco Integrated Security Off-Premises	SER OFF
Tamper Alarm	TAMPER ALM
Tamper Restore	TAMPER RST
VVS Bypass	VVS BYPASS
VVS Unbypass	VVS UNBYP
Bypass by User	BYP USER
Keypad Active	ACCESS
Audible Walk-Test	AUDIBLE TS
Change Code	CH CODE



## System Operation (cont'd)

Description	Alpha
<b>Other (continued)</b>	
Change Early Open	CH ER OPEN
Change Holiday	CH HOLIDAY
Change Latest Close – sent only if closing schedule is altered	CH LT CLOS
Change Open Time – schedule change	CH OPEN TM
Change Time – time/date reset	CH TIME
Carbon Monoxide Alarm	CO ALARM
Carbon Monoxide Bypass	CO BYPASS
Carbon Monoxide Restore	CO RST
Carbon Monoxide Trouble	CO TBL
Carbon Monoxide Unbypass	CO UNBYP
<b>Long Range Radio</b>	
DC Fault	LR DC FLT
DC Fault Restore	LR DC RST
Tamper Fault	LR TMP FLT
Tamper Fault Restore	LR TMP RST
Low Battery	LR BAT FLT
Low Battery Restore	LR BAT RST
VSR Fault (antenna)	LR VSR FLT
VSR Fault Restore (antenna)	LR VSR RST
ECP Fault	LR ECP FLT
ECP Fault Restore	LR ECP RST
Communication Fault	LR COM FLT
Communication Fault Restore	LR COM RST
<b>System Test</b>	
Walk-Test	WALK TEST
Bell Test	BELL TEST
Holdup Test Alarm	HU TEST AL
Holdup Test Restore	HU TEST RS
Start Fire Alarm Test	SRT FA TST
End Fire Alarm Test	END FA TST
Start Burglary Alarm Test	SRT BA TST

## ***System Operation (cont'd)***

<b>Description</b>	<b>Alpha</b>
<b>System Test (continued)</b>	
End Burglary Alarm Test	END BA TST
Start Supervisory Test	SRT SV TST
End Supervisory Test	END SV TST
Start Holdup Alarm Test	SRT HU TEST
End Holdup Alarm Test	END HU TST
Long Print	LONG PRINT
Short Print	SHT PRINT
Supervisory Test Print – manual trigger test report	CRIT TST A
Supervisory Test Restore	CRIT TST R
Fire Alarm Test Print	FIRE TST A
Fire Alarm Test Print Restore	FIRE TST R
Burglary Alarm Test Print	BA TST AL
Burglary Alarm Test Print Restore	BA TST RST
Holdup Suspicion Print	SUSPICION
Keypad No Access	NO ACCESS
Untyped Bypass	UT BYPASS
Untyped Unbypass	U UNBYPASS
Tamper Bypass	TMP BYPASS
Tamper Unbypass	TMP UNBYP
Burglary Alarm Diagnostics	BA WAN
Fire Alarm Diagnostics	FA WAN
Output Trouble	OUTPUT TBL
Output Trouble Restore	OUTPUT RST
Point Trouble	POINT TBL
Point Alarm – general alarm	POINT ALM
Point Alarm Restore – general alarm restore	POINT RST
Untyped Diagnostics	UA WAN
Burglary Alarm Weak Battery	B WEAK BAT
Fire Alarm Weak Battery	F WEAK BAT
Holdup Alarm Weak Battery	H WEAK BAT
Supervisory Alarm Weak Battery	S WEAK BAT

## System Operation (cont'd)

Description	Alpha
System Test (continued)	
Untyped Alarm Weak Battery	U WEAK BAT
Access	
2-Man 2 <sup>ND</sup> Person	ACCESS 2ND
Keypad Lockout	KEYPD LOCK
Cardreader Irregular Access	IRR ACCESS
Manual Pushbutton Access – remote arm/disarm opening	MAP ACCESS
Access Denied Code Known – access denied	DENIED NA
Access Denied Code Unknown – access denied	INVALID NA
Dialer Test	
Dialer Test Report	DLR TEST
Dialer Test Report with System Trouble Present	TBL TEST

### Bypassing/Unbypassing Burglary Protection

Bypassing a point or part of the burglary protection will cause the system to ignore that point or portion of protection until it is unbypassed (restored to normal operation) or the system is turned off.

Bypassing may be required to ignore a malfunctioning device or to allow access to permanently secured areas. Only those users assigned the privilege level of "Can Bypass BA" may bypass and unbypass protection.

#### Bypassing Protection Points

**NOTE: A bypassed point cannot detect intrusion or an alarm condition. Before resorting to bypassing a point, attempt to repair or correct the problem.**

1. Using the operating panel's numeric keypad, enter a valid ID code that has been assigned the privilege level of "Can bypass BA."
2. Press **More** twice to display Action Menu 3.
3. Press **Bypass** to display the Bypass Selection Menu 1.

## ***System Operation (cont'd)***

---

### **Bypass Selection Menu 1**

▶	◀ ?	What Type?	◀
▶	◀ Special	Burglar ▶	◀
▶	◀ Supervisory		◀
▶	◀ Quit	Holdup ▶	◀

**NOTE:** Special, Supervisory, Fire, and Holdup will be displayed only if the user has privilege level of "Can bypass FA/HU/SPV."

4. Press **Burglar** to display the Group Selection Menu.

### **Group Selection Menu**

▶	◀ ?	Which group:	◀
▶	◀	Group Description ▶	◀
▶	◀ Previous		◀
▶	◀ Quit		◀

5. Press **Previous** or **Next** to display the "Group description" that contains the point(s) you want to bypass.
6. Press the **Group description** button to display Bypass Selection Menu 2.

### **Bypass Selection Menu 2**

▶	◀ ?	Bypassing:	◀
▶	◀	Bypass points ▶	◀
▶	◀		◀
▶	◀ Quit	Bypass VVS ▶	◀

---

## System Operation (cont'd)

7. Press **Bypass points** to display the point number, status, description, and additional selector buttons.
8. Press **Prev** or **Next** to display the specific point to be bypassed.
9. Press **Bypass** to bypass the point displayed and to display the “unbypass” selector button.
10. To bypass additional points, repeat steps 8 and 9.
11. Press **Quit** to display Action Menu 1.

### Unbypassing Protection Points

Complete steps 1 through 7 under *Bypassing Protection Points*. Then perform the following steps:

8. Press **Prev** or **Next** to display the specific point to be unbypassed.
9. Press **Unbypass** to unbypass the point displayed and to display the “Bypass” selector button.
10. To unbypass additional points, repeat steps 8 and 9.
11. Press **Quit** to display Action Menu 1.

### Bypassing/Unbypassing Vault Vibration Sensors (VVS)

Vault vibration sensors are sophisticated electronic sensors that are sensitive to occupant and construction vibrations. If construction is scheduled to end by the programmed "Latest Close Time," use the Bypass VVS feature to automatically bypass **ALL** VVS detectors. **ALL** VVS detectors will be **automatically** unbypassed after 12 midnight. Complete steps 1 through 6 under *Bypassing Protection Points*. Then perform the following steps:

7. Press **Bypass VVS** or **Unbypass VVS** to bypass or unbypass vault vibration sensors.
8. Press **Quit** to display Action Menu 3.

## ***System Operation (cont'd)***

---

### **Extending Close Time**

Fifteen minutes prior to the scheduled close time, the operating panel will beep once per minute to remind you to close (turn on burglary protection). If you are unable to turn on the burglary protection, you must extend the close time. Extending the close time (temporary schedule change) will override the permanent close schedule for 1 day only. It will be automatically deleted at midnight of the day it was entered. To extend the close time, perform the following steps:

1. Using the operating panel's numeric keypad, enter a valid ID code that has been assigned the privilege level of "Can change temp sched."
2. Press **More** to display Action Menu 2.
3. Press **Change close time** to display Burglary group descriptions.
4. Press **Previous** or **Next** to display the specific Burglary group description.
5. Press the "**Group description**" button to display the current and new close times.
6. Using the operating panel's numeric keypad, enter the new close time.
7. Press **AM** or **PM** to complete your entry and to display the new close time.
8. Press **Quit** to display the Time Selection Menu.

## ***System Operation (cont'd)***

---

### **Sending Messages to a Pager**

The FOCUS 200 PLUS system can transmit messages to up to 8 paging services (typically at least one for each group). The types of messages are divided into 4 categories: System Troubles, Point Troubles, Alarms and Open/Closes.

The format of the pager message is as follows:

EEE GGG UUUU

EEE = Event Code

GGG = Group Number (001-008)

UUUU = User Number (for open/closes) or Point Number.

The possible event codes are:

111 = Fire Alarm

500 = Group Failed to Turn ON

222 = Hold-up or Hostage Alarm

555 = Point or System Trouble

333 = Burglary Alarm

777 = Group was Turned ON

400 = Group failed to Turn OFF

911 = Personal Emergency (Medical Alarm)

444 = Group was Turned OFF

The following is an example of a pager message:

444 001 0025 – Group 1 was turned OFF by user 25.

## ***System Test***

---

To ensure proper operation of your FOCUS® CADET security system, it is recommended that you periodically test all devices within your system. You can print, display, or audibly annunciate all system tests. Before testing protection groups and/or points, turn off the group(s) containing the points to be tested.

### **Burglary Protection Points (Audible)**

1. Using the operating panel's numeric keypad, enter a valid ID code to display Action Menu 1.
2. Bypass all protection points to be tested.
3. Press **More** to display Action Menu 2.
4. Press **Test** to display Test Menu 1.
5. Press **More** to display Test Menu 2.
6. Press **Burg pts. audibly** to audibly annunciate the test from the operating panel and begin the system test. The display will indicate "Test in Progress."
7. Walk through the test areas and activate each protection point to be tested. You will hear a beep when all points are secure (normal) and a steady tone when a point is activated.
8. When the test is complete, return to the operating panel and re-enter your ID code to display Action Menu 1.
9. Press **Reset** to display the reset options.
10. Press **Tests** to exit the test mode and to return the system to normal operation.
11. Press **Continue** to display Action Menu 1.
12. Unbypass those points that were bypassed for test purposes.



## ***System Test (cont'd)***

---

### **Protection Points (Visual)**

1. Using the operating panel's numeric keypad, enter a valid ID code to display Action Menu 1. Turn off those groups to be tested.
2. Press **More** to display Action Menu 2.
3. Press **Test** to display Test Menu 1.
4. Press **Sensor points** to display types of devices to be tested.
5. Press **Burglar** to display Burglary group descriptions.
6. Press **Previous** or **Next** to display the "Group description" to be tested.
7. Press **Group description** to begin display of the test instructions.
8. Press **More** 3 times to scroll through the test instructions.
9. Press **Start test** to begin the system test.
10. Activate those devices to be tested. One history event will be logged for each sensor.
11. When the test is complete, return to the operating panel and re-enter your ID code to display Action Menu 1.
12. Press **Reset** to display the reset options.
13. Press **Tests** to exit the test mode and to return the system to normal operation.
14. Press **Continue** to display Action Menu 1.
15. Press **More** twice to display Action Menu 3.
16. Press **History** to display the history menu and test results.

## ***System Test (cont'd)***

---

### **Protection Groups**

Use this test to determine if the selected Burglary group is ready to turn on.

1. Using the operating panel's numeric keypad, enter a valid ID code to display Action Menu 1.
2. Press **More** to display Action Menu 2.
3. Press **Test** to display Test Menu 1.
4. Press **Burglary groups** to display the "Burglary Group Descriptions."
5. Press **Previous** or **Next** to display the "Group description" to be tested.
6. Press **Group description** to test that specific group and to display the test results.
7. Press **Quit** to display Action Menu 2.
8. To test additional groups, repeat steps 3 through 7.

### **Testing Holdup, Fire, and Supervisory Devices**

**CAUTION: Use care when conducting this test. All holdup, fire, and supervisory functions are disabled during this test mode. In the event of a security breach or fire, no signals will be sent to the monitoring center.**

1. Using the operating panel's numeric keypad, enter a valid ID code that has been assigned the privilege level of "Can change perm sched" or "Can bypass FA/HU/SPV."
2. Press **More** to display Action Menu 2.
3. Press **Test** to display Test Menu 1.
4. Press **Sensor points** to display types of devices to be tested.
5. Press **Holdup, Fire, or Supervisory** to display the test instructions.
6. Press **More** twice to scroll through burglar device test instructions. Press **"?"**. Press **More** twice to scroll through fire, holdup, and supervisory test instruction. Press **Quit**. Press **More** twice for the remainder of the test instructions.

## ***System Test (cont'd)***

---

7. Press **Start test** to begin the test.
8. Activate each **Holdup**, **Fire**, or **Supervisory** device. You will hear a beep once per minute as a reminder that the system is in the test mode. A history event will be logged for each sensor activated.
9. Upon completion of the test, return to the operating panel and re-enter your ID code to display Action Menu 1.
10. Press **Reset** to display the reset options.
11. Press **Test** to exit the test mode and to return the system to normal operation.
12. Press **Continue** to display Action Menu 1.
13. Check the system history to see that all points tested properly.

### **Bell, Operating Panel Display, and Battery Test**

Testing the bell, operating panel display and battery will not affect any other operation, nor will it interfere with protection from any point or group.

1. Using the operating panel's numeric keypad, enter a valid ID code to display Action Menu 1.
2. Press **More** to display Action Menu 2.
3. Press **Test** to display Test Menu 1.
4. Press **More** to display Test Menu 2.
5. Press **Bel/Dsp/Batt tst** to begin automatic test of your system's bell, display, and battery.

**NOTE: A test pattern of all LCD elements will be shown for 4 seconds, and the bell will ring for the last 4 seconds of this 30-second test. Walk to an area where the bell can be heard to verify its operation. If a low battery condition is detected, trouble beeping will occur (except if the service code is used to perform the test).**

6. The display will indicate the completion of the test.

## ***Troubleshooting Guide***

---

During operation of your FOCUS® CADET security system, your operating panel may display error or trouble messages, which restrict system operation. To display additional information regarding trouble or error messages, press the "Help" selector button "?". The chart below also provides a list of these messages, a brief explanation and the required action to resolve the problem.

**NOTE: If a system trouble condition or error message persists, contact your Tyco Integrated Security Service Representative for assistance.**

<b><u>Trouble or Error Display</u></b>	<b><u>Description</u></b>	<b><u>Action</u></b>
<b>System has battery power only.</b>  <b>Cannot turn on! AC power is off.</b>	<b>AC electrical power has been interrupted or disconnected.</b>	1. Check the status of AC power throughout the facility.  2. Check that the Central Control Unit transformer is plugged into an AC electrical outlet.  3. Check the circuit breaker for the Central Control Unit AC electrical outlet.
<b>Cannot turn on! Battery power is low.</b>	Your system's standby battery is low.  If AC power has recently been interrupted or disconnected, it will be several hours before the standby battery re-charges.  If AC power has not been interrupted or disconnected, the standby battery may be defective.	4. Check availability of AC power (to re-charge the standby battery).  5. Check that the Central Control Unit transformer is plugged into an AC electrical outlet.  6. Check the circuit breaker for the Central Control Unit AC electrical outlet.
<b>Tyco Integrated Security Service personnel working on system.</b>	The user is not authorized to perform any function until Tyco Integrated Security is finished working.	7. Check with your Tyco Integrated Security Service Representative to determine completion time.

## ***Troubleshooting Guide (cont'd)***

<b><u>Trouble or Error Display</u></b>	<b><u>Description</u></b>	<b><u>Action</u></b>
<b>System has telephone line problem.</b>  <b>Cannot turn on! Communication line trouble.</b>	A problem exists with the system's telephone line.	8. Check other telephones in the facility.  9. Contact the telephone company (if other telephones do not work) or your Tyco Integrated Security Service Representative (if other telephones work) for assistance.
<b>Time to turn on 'Group Description' or extend closing time.</b>	This is a "Late Close Warning." The operating panel will emit a steady tone until the closing time is changed. If the system is not turned on or the closing time extended, a signal will be transmitted to the Tyco Integrated Security Customer Monitoring Center.	10. Turn the system on.  OR 11. Extend the closing time. <b>NOTE: You must have an ID code with a privilege level of "Can change temp sched."</b>
<b>Cannot turn on! 'Group Description' must be on first.</b>	Group interlock option is programmed into your system.	12. The group displayed must be turned on before the group you have selected.
<b>Cannot turn off 'Group Description' Schedule locked.</b>	Your system is programmed with "schedule lockout" for this protection group.	13. This group can only be turned off during the programmed opening schedule. Check with your Security Manager to determine the programmed schedule.

## ***Troubleshooting Guide (cont'd)***

<b><u>Trouble or Error Display</u></b>	<b><u>Description</u></b>	<b><u>Action</u></b>
<b>Fire, SPV or Holdup points bypassed.</b>	Some fire, supervisory, or holdup points are bypassed.	14. Check with your Tyco Integrated Security Service Representative to determine when they will be restored.
<b>Cannot turn on! System must be reset by Tyco Integrated Security.</b>	Your system is programmed with the Tyco Integrated Security reset option.	15. Contact your Tyco Integrated Security Service Representative to reset your system.
<b>Code incorrect.</b>	User has entered an invalid ID code.	16. Press "Try again" button and re-enter a valid 6-digit ID code.
<b>Code incorrect. Keyboard locked. Please wait.</b>	User has entered 18 incorrect ID code digits.	17. Wait 60 seconds for the operating panel lockout to expire and re-enter a valid ID code.
<b>Cannot turn on! Some points are abnormal.</b>	There are some abnormal protection points within the group you selected.	18. Press "See points" button. 19. Inspect and secure (return to normal) these points before turning this group on.
<b>Too many points bypassed.</b>	Bypass warning. Too many points are bypassed, which may compromise building security.	20. If you do not have bypass capability, check with your Security Manager before proceeding. 21. If you have bypass capability, unbypass some of these points before turning the system on.

## ***Fire Alarm Application Note***

---

### **About Fire Alarm Codes**

There are various fire alarm codes written by industry associations and institutes. For example, the National Fire Alarm Protection Association writes the National Life Safety Code, also known as NFPA 101. There are other fire alarm codes written by other associations or institutes such as BOCA and ICBO that specify whether or not a given building or structure type is required to have a fire alarm system and if so what fire alarm system functions must be supported. Each state and local government jurisdiction adopts in part or in entirety these codes which become that jurisdiction's code.

In addition there are also standards that govern the design, installation and service of fire alarm systems. For instance, the use and placement of smoke and fire detection devices is specified in the National Fire Alarm Code. The most popularly adopted code is the National Fire Alarm Code, commonly referred to as NFPA 72.

### **Code Enforcement**

Codes are enforced by the person who is designated by the state or local government as the "Authority Having Jurisdiction," also simply referred to as the "AHJ." The AHJ has the delegated power to review and interpret the code as it may pertain to a particular structure. The AHJ must interpret codes because structures often are not uniform. So for example, the AHJ will review a fire alarm design for the correct number of smoke detectors and their placement in relation to the structure's layout.

### **FOCUS Cadet Plus Fire Alarm System Capabilities**

The FOCUS® CADET security system is Underwriters Laboratories listed for, and can support, addressable smoke and fire detection, as well as provide fire alarm warning to your premise's occupants. It is a best fit for many structures that require fire alarm in those jurisdictions that allow combination security and fire alarm systems.

Tyco Integrated Security can help you with all your fire alarm system requirements. Even if you already have a fire alarm system, be sure to involve your local Tyco Integrated Security office anytime you are renovating or expanding your facility. Your local representative can help you determine how to protect your facility whether it be for fire, security, or critical item monitoring such as cooler temperatures or storage tank levels.

## ***Emergency Evacuation***

---

Establish and regularly practice a plan of escape in the event of fire. The following steps are recommended by the National Fire Protection Association:

1. Position your detector or your interior and/or exterior sounders so that they can be heard by all occupants.
2. Determine two means of escape from each room. One path of escape should lead to the door that permits normal exit from the building. The other should be an alternate escape route such as a window, to be used if your normal exit path is impassable. Station an escape ladder at such windows if there is a long drop to the ground.
3. Sketch a floor plan of the building. Show windows, doors, stairs, and rooftops that can be used to escape. Indicate escape routes for each room. Keep these routes free from obstruction and post copies of the escape routes in every room.
4. Assure that all bedroom doors are shut while you are asleep. This will prevent deadly smoke from entering while you escape.
5. Try the door. If the door is hot, check your alternate escape route. If the door is cool, open it cautiously. Be prepared to slam the door if smoke or heat rushes in.
6. Where smoke is present, crawl on the ground; do not walk upright. Smoke rises and may overcome you. Clearer air is near the floor.
7. Escape quickly; don't panic.
8. Establish a common meeting place outdoors, away from your house, where everyone can meet and then take steps to contact the authorities and account for those missing. Choose someone to assure that nobody returns to the house — many die going back.



## **FEDERAL COMMUNICATIONS COMMISSION STATEMENTS**

The user shall not make any changes or modifications to the equipment unless authorized by the Installation Instructions or User's Manual. Unauthorized changes or modifications could void the user's authority to operate the equipment.

### **CLASS B DIGITAL DEVICE STATEMENT**

This equipment has been tested to FCC requirements and has been found acceptable for use. The FCC requires the following statement for your information:

This equipment generates and uses radio frequency energy and if not installed and used properly, that is, in strict accordance with the manufacturer's instructions, may cause interference to radio and television reception. It has been type tested and found to comply with the limits for a Class B computing device in accordance with the specifications in Part 15 of FCC Rules, which are designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- If using an indoor antenna, have a quality outdoor antenna installed.
- Reorient the receiving antenna until interference is reduced or eliminated.
- Move the radio or television receiver away from the receiver/control.
- Move the antenna leads away from any wire runs to the receiver/control.
- Plug the receiver/control into a different outlet so that it and the radio or television receiver are on different branch circuits.
- Consult the dealer or an experienced radio/TV technician for help.

### **INDUSTRY CANADA CLASS B STATEMENT**

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

### **FCC / IC STATEMENT**

This device complies with Part 15 of the FCC Rules, and RSS210 of Industry Canada. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Cet appareil est conforme à la partie 15 des règles de la FCC & de RSS 210 des Industries Canada. Son fonctionnement est soumis aux conditions suivantes: (1) Cet appareil ne doit pas causer d'interférences nuisibles. (2) Cet appareil doit accepter toute interférence reçue y compris les interférences causant une réception indésirable.

## **NOTIFICATION**

All connections to the telephone network must be made through standard plugs and standard telephone company jacks, or equivalent, in such manner as to allow for easy and immediate disconnection of the alarm equipment. If the connecting cord is unplugged from the jack there shall be no interference to the telephone equipment still connected to the telephone network. Notify the telephone company if the communicator is removed from the premises and the RJ-31X or RJ38X jack is no longer needed.

### **MALFUNCTIONS OF EQUIPMENT**

In the unlikely event that the system should ever fail to operate properly, it should be disconnected from the RJ-31X or RJ38X jack to determine if the problem is with the telephone network or with the security system. If a problem is found with the communicator, leave disconnected until repaired or replaced.

If you experience trouble with the telephone equipment, please contact your Tyco Integrated Security Customer Service Representative and ask for information on obtaining service or repairs.

The telephone company may ask that you disconnect this equipment from the network until the problem has been corrected or until you are sure that the equipment is not malfunctioning.

## **FEDERAL COMMUNICATIONS COMMISSION (FCC) PART 68 NOTICE**

This equipment complies with Part 68 of the FCC rules. On the front cover of this equipment is a label that contains, among other information, the FCC registration number and ringer equivalence number (REN) for this equipment. If requested, this information must be provided to the telephone company.

This equipment uses the following jacks: An RJ31X is used to connect this equipment to the telephone network.

The REN is used to determine the quantity of devices which may be connected to the telephone line. Excessive RENs on the telephone line may result in the devices not ringing in response to an incoming call. In most, but not all areas, the sum of the RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to the line, as determined by the total RENs, contact the telephone company to determine the maximum REN for the calling area.

If this equipment causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. If advance notice is not practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe necessary.

The telephone company may make changes in its facilities, equipment, operations, or procedures that could affect the operation of the equipment. If this happens, the telephone company will provide advance notice in order for you to make the necessary modifications in order to maintain uninterrupted service.

If trouble is experienced with this equipment, please contact the manufacturer for repair and warranty information. If the trouble is causing harm to the telephone network, the telephone company may request you remove the equipment from the network until the problem is resolved.

There are no user serviceable components in this product, and all necessary repairs must be made by the manufacturer. Other repair methods may invalidate the FCC registration on this product.

This equipment cannot be used on telephone company-provided coin service. Connection to Party Line Service is subject to state tariffs.

This equipment is hearing-aid compatible.

When programming or making test calls to an emergency number, briefly explain to the dispatcher the reason for the call. Perform such activities in the off-peak hours; such as early morning or late evening.

## CANADIAN DEPARTMENT OF COMMUNICATIONS (DOC) STATEMENT

This Class B digital apparatus complies with Canadian ICES-003

### NOTICE

The Industry Canada Label identifies certified equipment. This certification means that the equipment meets telecommunications network protective, operational and safety requirements as prescribed in the appropriate Terminal Equipment Technical Requirements document(s). The Department does not guarantee the equipment will operate to the user's satisfaction.

Before installing this equipment, users should ensure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection. The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations.

Repairs to certified equipment should be coordinated by a representative designated by the supplier. Any repairs or alterations made by the user to this equipment, or equipment malfunctions, may give the telecommunications company to request the user to disconnect the equipment.

Users should ensure for their own protection that the electrical ground connections of the power utility, telephone lines and internal metallic water pipe system, if present, are connected together. This precaution may be particularly important in rural areas.

**Caution:** Users should not attempt to make such connections themselves but should contact appropriate electric inspection authority, or electrician, as appropriate.

**NOTICE:** The **Ringer Equivalence Number (REN)** assigned to each terminal device provides an indication of the maximum number of terminals allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the Ringer Equivalence Numbers of all the devices does not exceed 5.

### AVIS

L'étiquette d'Industrie Canada identifie le matériel homologué. Cette étiquette certifie que le matériel est conforme aux normes de protection, d'exploitation et de sécurité des réseaux de télécommunications, comme le prescrivent les documents concernant les exigences techniques relatives au matériel terminal. Le Ministère n'assure toutefois pas que le matériel fonctionnera à la satisfaction de l'utilisateur.

Avant d'installer ce matériel, l'utilisateur doit s'assurer qu'il est permis de le raccorder aux installations de l'entreprise locale de télécommunication. Le matériel doit également être installé en suivant une méthode acceptée de raccordement. L'abonné ne doit pas oublier qu'il est possible que la conformité aux conditions énoncées ci-dessus n'empêche pas la dégradation du service dans certaines situations.

Les réparations de matériel homologué doivent être coordonnées par un représentant désigné par le fournisseur. L'entreprise de télécommunications peut demander à l'utilisateur de débrancher un appareil à la suite de réparations ou de modifications effectuées par l'utilisateur ou à cause de mauvais fonctionnement.

Pour sa propre protection, l'utilisateur doit s'assurer que tous les fils de mise à la terre de la source d'énergie électrique, de lignes téléphoniques et des canalisations d'eau métalliques, s'il y en a, sont raccordés ensemble. Cette précaution est particulièrement importante dans les régions rurales.

**Avertissement :** L'utilisateur ne doit pas tenter de faire ces raccordements lui-même; il doit avoir recours à un service d'inspection des installations électriques, ou à un électricien, selon le cas.

**AVIS : L'indice d'équivalence de la sonnerie (IES)** assigné à chaque dispositif terminal indique le nombre maximal de terminaux qui peuvent être raccordés à une interface. La terminaison d'une interface téléphonique peut consister en une combinaison de quelques dispositifs, à la seule condition que la somme d'indices d'équivalence de la sonnerie de tous les dispositifs n'excède pas 5.

## **WARNING!**

### **THE LIMITATIONS OF THIS ALARM SYSTEM**

While this system is an advanced design security system, it does not offer guaranteed protection against burglary or fire or other emergency. Any alarm system, whether commercial or residential, is subject to compromise or failure to warn for a variety of reasons. For example:

- Intruders may gain access through unprotected openings or have the technical sophistication to bypass an alarm sensor or disconnect an alarm warning device.
- Intrusion detectors (e.g., passive infrared detectors), smoke detectors, and many other sensing devices will not work without power. Battery-operated devices will not work without batteries, with dead batteries, or if the batteries are not put in properly. Devices powered solely by AC will not work if their AC power supply is cut off for any reason, however briefly.
- Signals sent by wireless transmitters may be blocked or reflected by metal before they reach the alarm receiver. Even if the signal path has been recently checked during a weekly test, blockage can occur if a metal object is moved into the path.
- A user may not be able to reach a panic or emergency button quickly enough.
- While smoke detectors have played a key role in reducing residential fire deaths in the United States, they may not activate or provide early warning for a variety of reasons in as many as 35% of all fires, according to data published by the Federal Emergency Management Agency. Some of the reasons smoke detectors used in conjunction with this System may not work are as follows. Smoke detectors may have been improperly installed and positioned. Smoke detectors may not sense fires that start where smoke cannot reach the detectors, such as in chimneys, in walls, or roofs, or on the other side of closed doors. Smoke detectors also may not sense a fire on another level of a residence or building. A second-floor detector, for example, may not sense a first-floor or basement fire. Moreover, smoke detectors have sensing limitations. No smoke detector can sense every kind of fire every time. In general, detectors may not always warn about fires caused by carelessness and safety hazards like smoking in bed, violent explosions, escaping gas, improper storage of flammable materials, overloaded electrical circuits, children playing with matches, or arson. Depending upon the nature of the fire and/or the locations of the smoke detectors, the detector, even if it operates as anticipated, may not provide sufficient warning to allow all occupants to escape in time to prevent injury or death.
- Passive Infrared Motion Detectors can only detect intrusion within the designed ranges as diagrammed in their installation manual. Passive Infrared Detectors do not provide volumetric area protection. They do create multiple beams of protection, and intrusion can only be detected in unobstructed areas covered by those beams. They cannot detect motion or intrusion that takes place behind walls, ceilings, floors, closed doors, glass partitions, glass doors, or windows. Mechanical tampering, masking, painting or spraying of any material on the mirrors, windows or any part of the optical system can reduce their detection ability. Passive Infrared Detectors sense changes in temperature; however, as the ambient temperature of protected area approaches the temperature range of 90° to 105°F, the detection performance can decrease.

**WARNING!**  
**THE LIMITATIONS OF THIS ALARM SYSTEM**  
**(continued)**

- Alarm warning devices such as sirens, bells, or horns may not alert people or wake up sleepers if they are located on the other side of closed or partly open doors. If warning devices sound on a different level of the residence from the bedrooms, then they are less likely to waken or alert people inside the bedrooms. Even persons who are awake may not hear the warning if the alarm is muffled from a stereo, radio, air conditioner or other appliance, or by passing traffic. Finally, alarm warning devices, however loud, may not warn hearing-impaired people or waken deep sleepers.
- Telephone lines needed to transmit alarm signals from a premises to a central monitoring station may be out of service or temporarily out of service. Telephone lines are also subject to compromise by sophisticated intruders.
- Even if the system responds to the emergency as intended, however, occupants may have insufficient time to protect themselves from the emergency situation. In the case of a monitored alarm system, authorities may not respond appropriately.
- This equipment, like other electrical devices, is subject to component failure. Even though this equipment is designed to last as long as 10 years, the electronic components could fail at any time.

The most common cause of an alarm system not functioning when an intrusion or fire occurs is inadequate maintenance. This alarm system should be tested weekly to make sure all sensors and transmitters are working properly.

Installing an alarm system may make one eligible for lower insurance rates, but an alarm system is not a substitute for insurance. Homeowners, property owners, and renters should continue to act prudently in protecting themselves and continue to insure their lives and property.

We continue to develop new and improved protection devices. Users of alarm systems owe it to themselves and their loved ones to learn about these developments.

# Index

---

"Quick Start" .....	4	Change perm sched .....	39
Access Capability .....	40	Change temp sched.....	39
Action Menu 1.....	19, 29	CHANGES IN TELEPHONE COMPANY	
Action Menu 2.....	21, 30	EQUIPMENT.....	81
Action Menu 3.....	22, 31	Changing Daily Operating Schedules .....	45
Action Menu 4.....	24, 32	Changing the Current Date.....	43
Action Menus.....	29	Changing the Current Time.....	42
Action Menus 1-4.....	18	Changing the Time and Date.....	42
Customer Monitoring Center .....	9	Character Entry Screen .....	24
Tyco Integrated Security Service personnel		Character Keys .....	35
working on system.....	77	Code incorrect. ....	78
Assigning a Code and Card Cancel Date.....	41	Code incorrect. Keyboard locked.	
Assigning a User a Card/Key Code.....	41	Please wait. ....	78
Assigning a User ID Code.....	41	Conditions Not Covered By Warranty .....	89
Assigning Access to a User.....	37	CONTRAST .....	28
Assigning Burglary Group Access .....	38	Control Unit.....	4
Assigning Privilege Levels.....	38	Current.....	31
Assistance: The "?" Selections.....	19	Customer Monitoring Center.....	33
Auto On/Off Schedule.....	47	Daily Operating Schedules .....	44
Automated Recording and Documenting.....	6	Daylight.....	31
AWAY .....	3, 5	Deleting a User ID Code.....	36
BURGLARY NOTE .....	13	DOC.....	83
Bypass.....	22, 31	Emergency Evacuation.....	80
Bypass BA.....	39	ENTERING A VALID ID CODE.....	15
Bypass Selection Menu 1 .....	68	Entering Your Personal ID Number .....	15
Bypass Selection Menu 2 .....	68	Event Code .....	71
Bypassing Protection Points.....	67	Extending Close Time.....	70
Bypassing/Unbypassing Vault Vibration		Fall Daylight.....	44
Sensors (VVS).....	69	False Alarm Prevention .....	7
Can change names .....	34	False alarms .....	8
Cannot turn off 'Group Description'		FCC PART 15 STATEMENT.....	81
Schedule locked .....	77	FCC PART 68 NOTICE.....	82
Cannot turn on! 'Group Description'		Fire Alarm Application Note .....	79
must be on first.....	77	Fire Alarm Codes .....	79
Cannot turn on! AC power is off. ....	76	Fire Alarm System Capabilities.....	79
Cannot turn on! Battery power is low.....	76	FIRE NOTE .....	13
Cannot turn on! Communication line		Fire, SPV or Holdup points bypassed.....	78
trouble.....	77	First.....	32
Cannot turn on! Some points are		FOCUS® ELITE Features .....	3
abnormal.....	78	Group Number .....	71
Cannot turn on! System must be		Group Selection Menu .....	68
reset by Tyco Integrated Security.....	78	Group/Point Descriptions.....	52
Change close time.....	21, 30	History.....	22, 31
Change names .....	39	History Log.....	5

History Log Alpha and Event Codes .....	61	Spring Daylight.....	44
History Selection Menu .....	60	Status .....	22, 31
HOLDUP NOTE .....	13	STAY .....	5
Holiday .....	31	STAY mode .....	3, 55
Holiday Dates .....	52	SysInfo .....	24, 32
Holiday Description and Dates .....	50	System has battery power only .....	76
Hstg .....	31	System has telephone line problem.....	77
ID codes.....	24, 32, 33	System History Log .....	59
INCIDENCE OF HARM.....	81	System Operation Overview.....	27
Lesson .....	19, 29	System Overview .....	3
LIMITATIONS OF THIS ALARM SYSTEM.....	84	System Programming.....	33
LIMITED WARRANTY .....	89	System Test .....	72
Load.....	24, 32	temporary schedule.....	45
MALFUNCTIONS OF EQUIPMENT.....	82	TERMS AND CONDITIONS.....	89
Marlok keys.....	5	Test .....	21, 30
More.....	29	Testing Bell and Operating Panel Display.....	75
Name pnt/gps .....	24, 32	Testing Burglary Protection Points	
National Life Safety Code .....	79	(Audible).....	72
Navigational Menu Selections.....	16	Testing Holdup, Fire and Supervisory	
Normal Inactive Screen .....	12	Devices .....	74
Open irregular.....	38	Testing Protection Groups .....	74
Open/Close.....	31	Testing Protection Points (Visual) .....	73
Open/Close Schedule Limits .....	49	Time .....	22, 31
operating panel.....	4	Time Selection Menu .....	42
Operating Panel.....	27	Too many points bypassed. ....	78
Operating Panel Functions .....	11	Troubleshooting Guide.....	76
Operating Panel Lock-Out .....	27	Turn Off Menu .....	57
Pager .....	71	Turn on.....	19, 29
pager message.....	71	Turning BA Groups Off.....	18
permanent schedule .....	45	Turning Off ALL Burglary Groups.....	57
Permits for alarm system .....	8	Turning Off Burglary Groups Using a	
Personal Identification Number (PIN), .....	9	Key or Card Reader .....	58
Point Number.....	71	Turning Off Burglary Protection.....	56
Preventing causes of false alarms.....	9	Turning Off One or More Burglary Groups ....	57
Previous .....	30	Turning On ALL Burglary Groups.....	54
Printing the History Log .....	60	Turning On Burglary Groups Using a	
Privilege Level .....	34	Key or Card Reader .....	56
Programming .....	11	Turning On Burglary Protection.....	54
Protection Points and Groups.....	5	Turning On One or More Burglary Groups .....	55
Quick Start.....	11	Unbypassing Protection Points .....	69
Quit .....	29	User Access and Security .....	5
Reset .....	19, 29	User Data .....	33
Resetting Current Alarms .....	58	User Name.....	34
Responding To Alarms .....	13	User Number.....	71
See alarms.....	19, 29	User Selection Menu .....	35
See points.....	21, 30	Viewing Current Alarms .....	14
Setting Dates for Daylight Saving Time .....	43	Viewing the History Log .....	59
Silent holdup alarm .....	16	Wiegand.....	5

## LIMITED WARRANTY

### Terms and Conditions Applying to Sale of Equipment

**Limited Warranty.** Any original part of the system (as distinguished from the Software), including the wiring, installed under this Agreement which proves to be defective in material or workmanship within 90 days of the date of completion of installation ("Warranty Period") will be repaired or replaced at Tyco Integrated Security's ("Tyco") sole discretion, with a new or functionally operative part. Labor and material required to repair or replace such defective components will be furnished at no charge during the Warranty Period.

Warranty Services will be furnished between 8:00A.M. to 4:30P.M., Monday through Friday, except holidays. If Customer has purchased QSP/Maintenance services, the foregoing Warranty Period will be extended for the time period purchased and at the additional cost for QSP/Maintenance shown in your Agreement with Tyco. The following "Conditions" are not covered by Warranty:

(a) Damage or extra service time needed resulting from accidents, acts of God, lightning, strikes, riots, floods, terrorism, acts of War, alteration, misuse, tampering or abuse, adjustments, repairs or maintenance not done by Tyco or from parts, accessories, attachments, or other devices not furnished by Tyco. (b) Customer's failure to properly follow operating instructions provided by Tyco; (c) Adjustments necessitated by misalignment of video cameras, improper adjustment of monitor brightness and contrast tuning dials or insufficient light on the area viewed by the camera(s); (d) Trouble due to interruption of Telecom Service; (e) Battery failure; (f) Devices designed to fail in protecting the System, such as, but not limited to, fuses and circuit breakers; or (g) System changes requested by Customer. If Customer calls Tyco for service under the Warranty and Tyco's representative finds that one of the "Conditions" has led to the inoperability or apparent inoperability of the System or any component, Tyco may bill Customer for the service call whether or not Tyco actually works on the System. If repairs are required due to one of the above "Conditions," Tyco will charge Customer for such work on a time and materials basis at Tyco's then applicable rates for labor and materials.

**THE FOREGOING WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. THE CUSTOMER'S EXCLUSIVE REMEDY WITH RESPECT TO ANY AND ALL LOSSES OR DAMAGES RESULTING FROM ANY CAUSE WHATSOEVER, INCLUDING TYCO'S NEGLIGENCE, IS REPAIR OR REPLACEMENT AS SPECIFIED ABOVE. TYCO WILL IN NO EVENT BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES OF ANY NATURE, INCLUDING WITHOUT LIMITATION, DAMAGES FOR PERSONAL INJURY OR DAMAGES TO PROPERTY, HOWEVER OCCASIONED, WHETHER ALLEGED AS RESULTING FROM BREACH OF WARRANTY OR CONTRACT BY TYCO OR NEGLIGENCE OF TYCO OR OTHERWISE.**

To obtain service under this warranty, call or write our local Tyco Integrated Security (Tyco) Service Department at the telephone number or address found in your local yellow pages, at 1.800.289.2647 or online at: <http://www.tycois.com/about-us/contact-us>.

**COPYRIGHT 2012. TYCO INTEGRATED SECURITY LLC - ALL RIGHTS RESERVED**

No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form, or by any means – electronic, mechanical, photocopying, recording, or otherwise without the written permission of Tyco Integrated Security LLC. The material in this publication is for information purposes and subject to change without notice. Tyco Integrated Security LLC. assumes no responsibility for any errors which may appear in this publication.

***tyco***  
***Integrated Security***

Tyco Integrated Security  
1501 Yamato Road  
Boca Raton, FL 33431  
Copyright © 2009



**K3824V5 8/11 Rev C**